
## Model 213, 238


## Shown on model 213

- 1 Floor covering
- 2 Door sill
- 3 Accelerator pedal

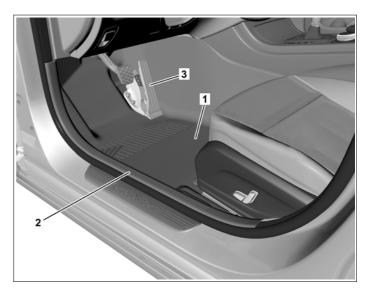

P68.20-4746-11

XX	Remove/install		
1	Adjust steering column toward rear and completely upward		
2	Detach driver's seat and tilt toward rear		AR91.10-P-1000LW
		i Do not disconnect electrical connectors.	
3	Remove cover under the dashboard on the driver-side		AR68.10-P-1501LWE
4	Remove accelerator pedal (3)		AR30.12-P-1321LWE
5	Remove door sill molding (2)	Model 238	AR68.30-P-4100CLW
		Model 213	AR68.30-P-4100LW
6	Remove floor covering (1) from front to rear	Mounting wedge	*110589035900
7	Install in the reverse order		

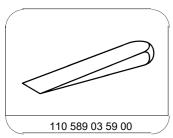

Mounting wedge