


Model 213.0/2

i Installation is shown on the example of the right-hand side of the vehicle. Installation at the left-hand side of the vehicle takes place in the same way.


- 1 Clean contact surface of door sill in the hatched area.

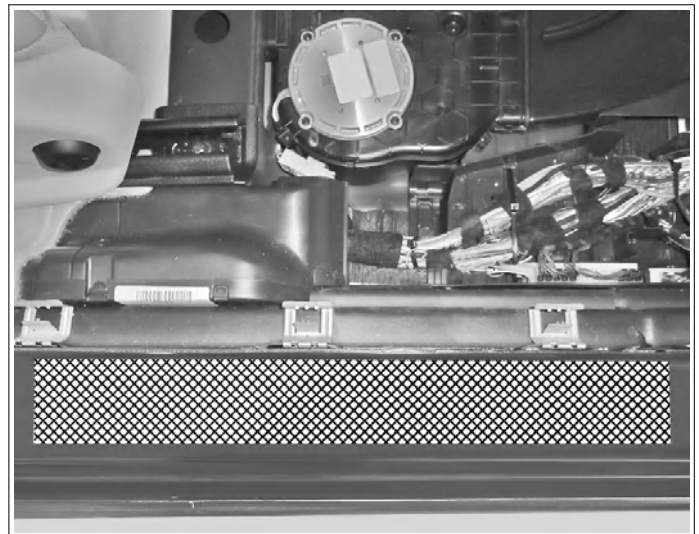

P82.20-4513-11

- 2 Remove carrier foil (8) from the right front illuminated door sill molding (E17/48).

i Pay attention to guides (9) during subsequent installation.

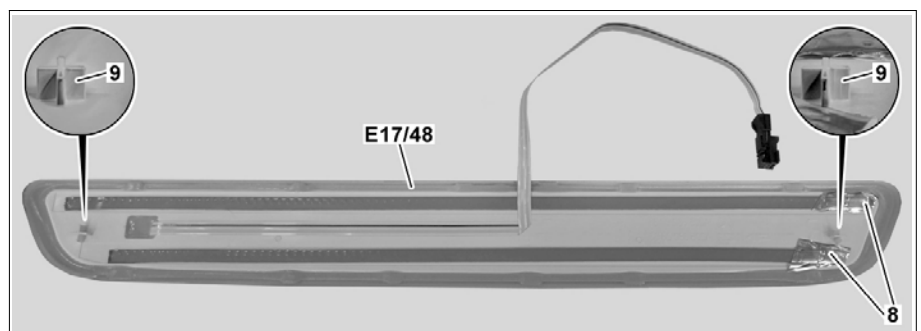

P82.20-4516-04


- 3 Position right front illuminated door sill molding (E17/48) on longitudinal member and press on evenly.

- 4 Connect black 2-pin connector (12) of electrical line for right front illuminated door sill molding (E17/48) to black 2-pin plug (2.9) of right front illuminated door sill molding branch-off line (2.2).

- 5 Clip in created electrical connector at cable duct.

- 6 Route electrical line of right front illuminated door sill molding (E17/48) via body flange on longitudinal member and fix in place with duct tape (10).

- 7 Fix electrical line of right front illuminated door sill molding (E17/48) in place with felt tape (11) at longitudinal member.

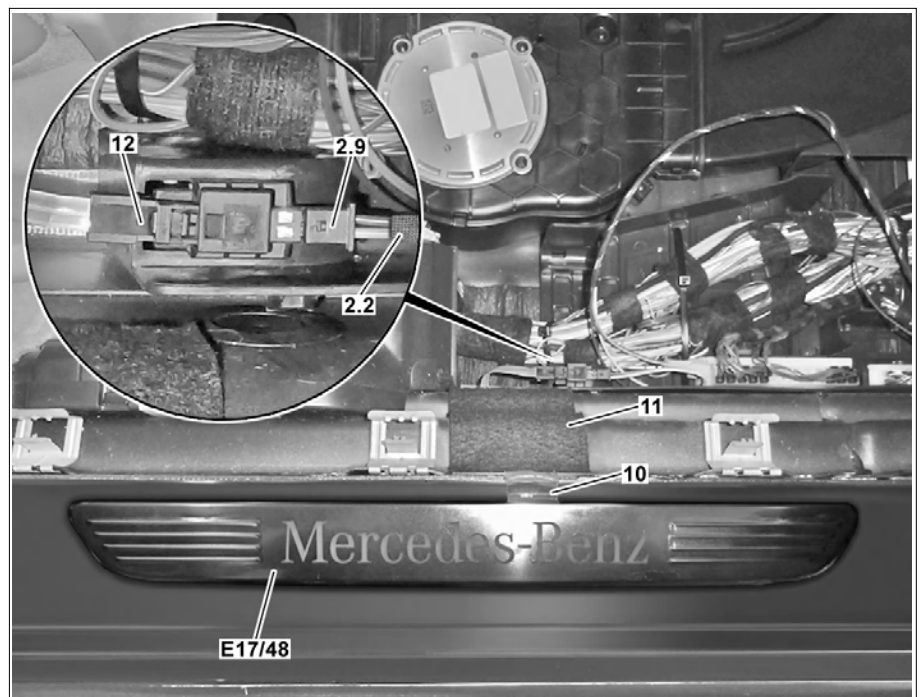

P82.20-4514-06