



**Model 213.0/1/2**

- 1 Stick felt tape (6) to upper side of illuminated door sill molding control unit (1).
- 2 Stick commercially available velcro strips (7) to lower side of illuminated door sill molding control unit (1).

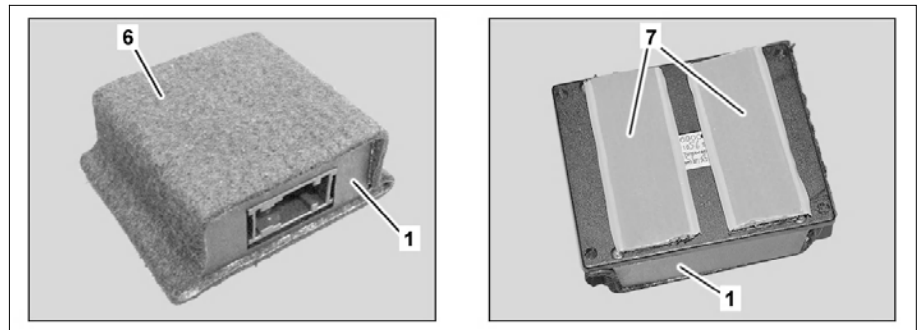

P82.20-4216-04

- 3 Remove footrest (5) and set down in front passenger footwell.
- 4 Fold non-woven cloth (5.1) at footrest (5) to one side in area of control unit (1).
- 5 Remove carrier foils from velcro strips of illuminated door sill molding control unit (1).
- 6 Glue illuminated door sill molding control unit (1) onto footrest (5).
- 7 Connect black 18-pin connector (2.4) of illuminated door sill molding wiring harness to illuminated door sill molding control unit (1).

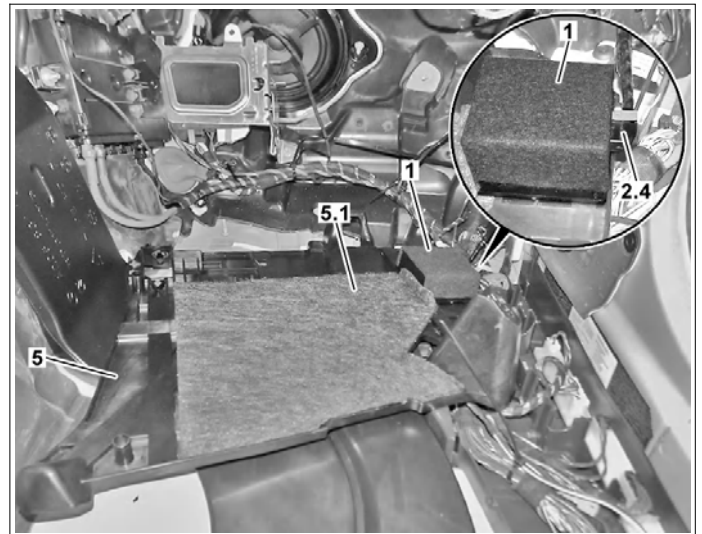

P82.20-4512-11