


Model 213

Model 238

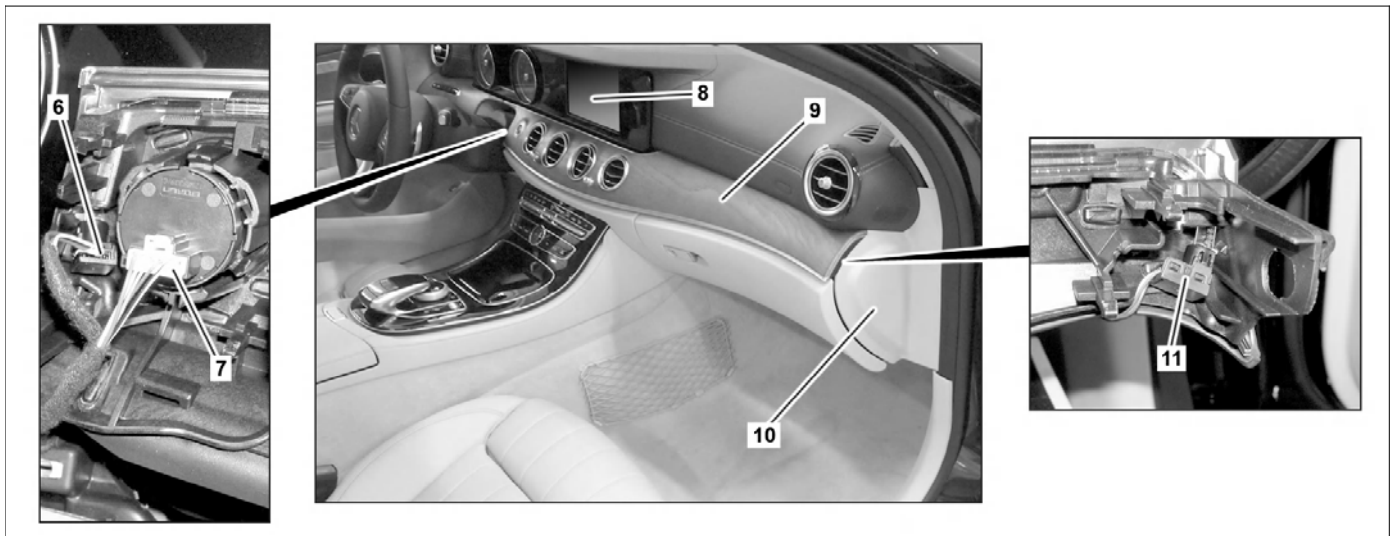

P68.10-4974-08


Shown with code 877 (Ambient lighting)

6 Light-emitting diode
7 Electrical connector

8 Display module
9 Passenger side trim pieces

10 Cover
11 Light-emitting diode

	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Move steering wheel all way down and to rear		
2	Disconnect battery ground line	Model 238 Model 213	AR54.10-P-0003LWO AR54.10-P-0003LW
3	Loosen edge guard in area of cover (10)	Installation: Ensure that edge guard is seated correctly.	
4	Remove cover (10)	Mounting wedge	*110589035900
5	Remove display module (8) and lay down to side with electrical lines connected		AR54.30-P-6023LWE
6	Unclip passenger side trim piece (9) at bottom over entire length	Start to unclip in area of cover (10). Mounting wedge	*110589035900
7	Slightly tilt passenger side trim piece (9) upward and remove from instrument panel	Installation: Pay attention for correct seat on center nozzles and separation point to driver side trim piece.	
8	Disconnect electrical connector (7)		
9	Disconnect light emitting diodes (6, 11) from fiber optic cables	Model 213, 238 with code 877 (ambient lighting)	
10	Remove passenger side trim piece (9)		
11	Install in the reverse order		

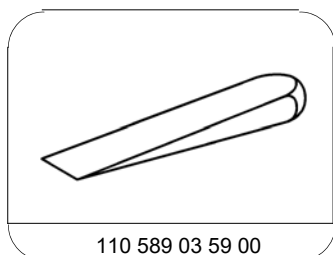

110 589 03 59 00

Mounting wedge