


**Model** 205, 213  
except code P23 (EXCLUSIVE exterior)

**Model** 238, 253 (except 253.388/389/988/989)

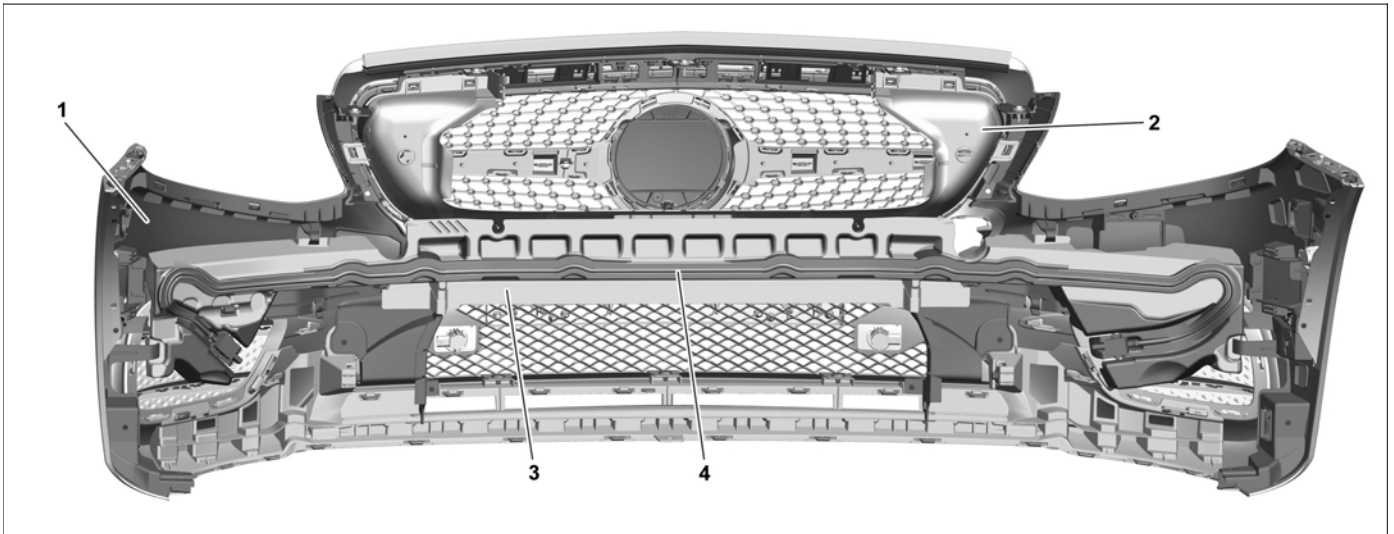

P88.20-4689-08

1 Front bumper  
2 Radiator trim  
3 Impact absorber  
4 Pedestrian protection sensor

☒ ☒	Remove/install		
1	Remove front bumper (1)	Model 205 except code P23 (EXCLUSIVE exterior) Model 253 (except 253.388/389/988/989) Model 213 except code P23 (EXCLUSIVE exterior) Model 238 (except 238.361/461) except code P31 (AMG Line exterior)	AR88.20-P-2000LW  AR88.20-P-2000LWE
2	Disconnect electrical connectors from pedestrian protection sensor (4)	Model 205, 213 with code U60 (Active Bonnet (Pedestrian protection)) except code P23 (EXCLUSIVE exterior) Model 238 (except 238.361/461) with code U60 (Active Bonnet (Pedestrian protection)) except code P31 (AMG Line exterior) Model 253 (except 253.388/389/988/989) with code U60 (Active Bonnet (Pedestrian protection))	
3	Remove impact absorber (3) Notes on pedestrian protection sensor  General information on the impact absorber	Model 205 with code U60 (Active Bonnet (Pedestrian protection)) except code P23 (EXCLUSIVE exterior) Model 253 (except 253.388/389/988/989) with code U60 (Active Bonnet (Pedestrian protection))	AH91.60-P-0001-01A  AH88.20-P-1000-01A

		<p><b>i</b> Model 205, 213 with code U60 (Active Bonnet (Pedestrian protection)) except code P23 (EXCLUSIVE exterior) Model 238 (except 238.361/461) with code U60 (Active Bonnet (Pedestrian protection)) except code P31 (AMG Line exterior) Model 253 (except 253.388/389/988/989) with code U60 (Active Bonnet (Pedestrian protection))</p> <p><b>Assembly:</b> Ensure that hose of pedestrian protection sensors (4) is seated correctly in impact absorber (3). If complaint present</p> <p style="text-align: center;">↓</p> <p>Correctly route hose of pedestrian protection sensor (4). Model 205 with code U60 (Active Bonnet (Pedestrian protection)) except code P23 (EXCLUSIVE exterior) Model 253 (except 253.388/389/988/989) with code U60 (Active Bonnet (Pedestrian protection)) Model 213 with code U60 (Active Bonnet (Pedestrian protection)) except code P23 (EXCLUSIVE exterior) Model 238 (except 238.361/461) with code U60 (Active Bonnet (Pedestrian protection)) except code P31 (AMG Line exterior)</p>	<p>AR91.60-P-0950LW</p> <p>AR91.60-P-0950LWE</p>
4	Remove radiator trim (2) from front bumper (1)		
5	Install in the reverse order		