


Model 213

Model 238

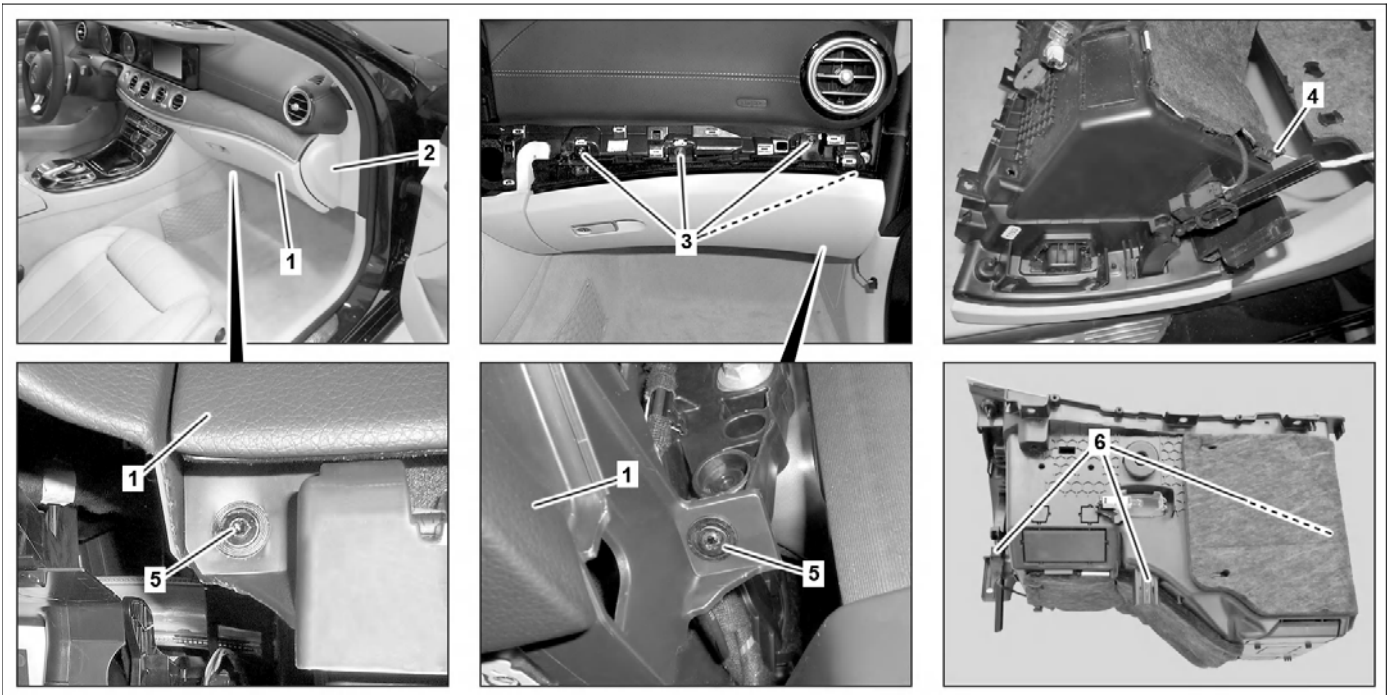

P68.10-4958-09

Shown except code P21 (Air quality package)

1 Glove compartment

2 Cover

3 Bolts

4 Electrical connector

5 Screw

6 Guides

	Remove/install		
1	Remove trim piece on passenger side instrument panel and lay down to side		AR68.10-P-1187LWE
2	Remove panel under passenger-side instrument panel		AR68.10-P-1502LWE
3	Unscrew bolts (5) below glove compartment (1)		
4	Remove bolts (3)	i One bolt (3) is located in the glove compartment (1) on right.	
5	Pull glove compartment (1) out until electrical connector (4) is accessible	i Installation: Push guides (6) of glove compartment (1) into instrument panel.	
6	Remove air duct in glove compartment (1)		
7	Disconnect electrical connector (4)		
8	Disconnect electrical connector from trunk lid lock separate switch	Model 213.0/1, 238 with code 887 (independent boot locking)	
9	Disconnect electrical connector and hose for perfume atomizer generator	Model 238 with code P21 (Air quality package) Model 213 with code P21 (Air quality package)	AR83.40-P-0200LWO AR83.40-P-0200LW
10	Remove glove compartment (1)		
11	Remove trunk lid lock separate switch from glove compartment (1)	Model 213.0/1, 238 with code 887 (independent boot locking) When replacing glove compartment (1).	
12	Remove perfume atomizer generator from glove compartment (1)	When replacing glove compartment (1). Model 238 with code P21 (Air quality package) Model 213 with code P21 (Air quality package)	AR83.40-P-0200LWO AR83.40-P-0200LW

13	Remove glove compartment illumination from glove compartment (1)	When replacing glove compartment (1).	
14	Install in the reverse order		