

Model 205.2

Model 213.2


Modification notes

26.03.2018 Special tool added.


Operation steps 4, 5, 6, 7

Shown on MODEL 205.2

- 1 Rear bumper
- 2 Bolts
- 3 Expansion rivet

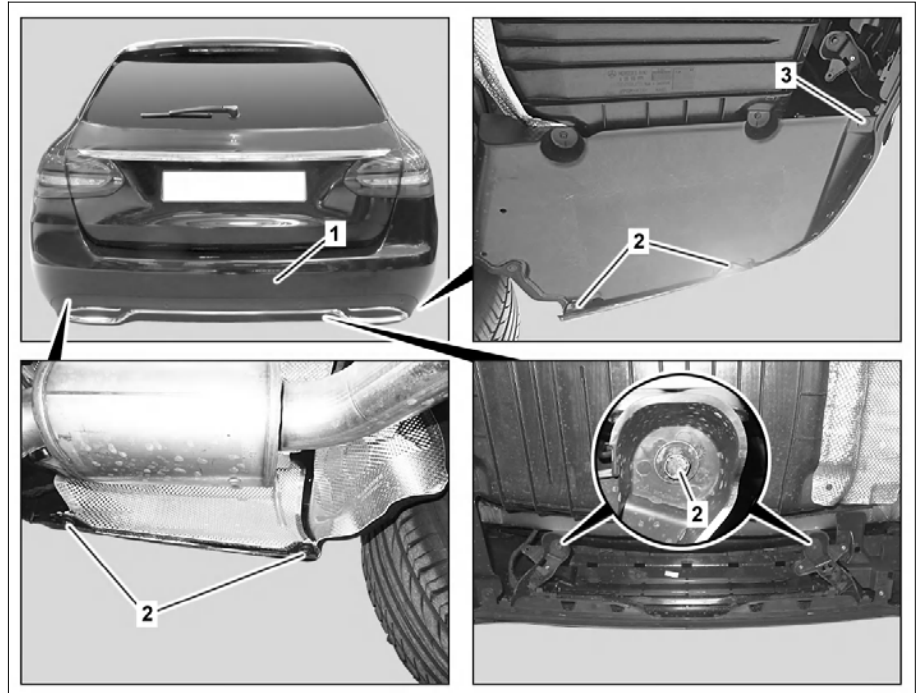


P88.20-4413-06

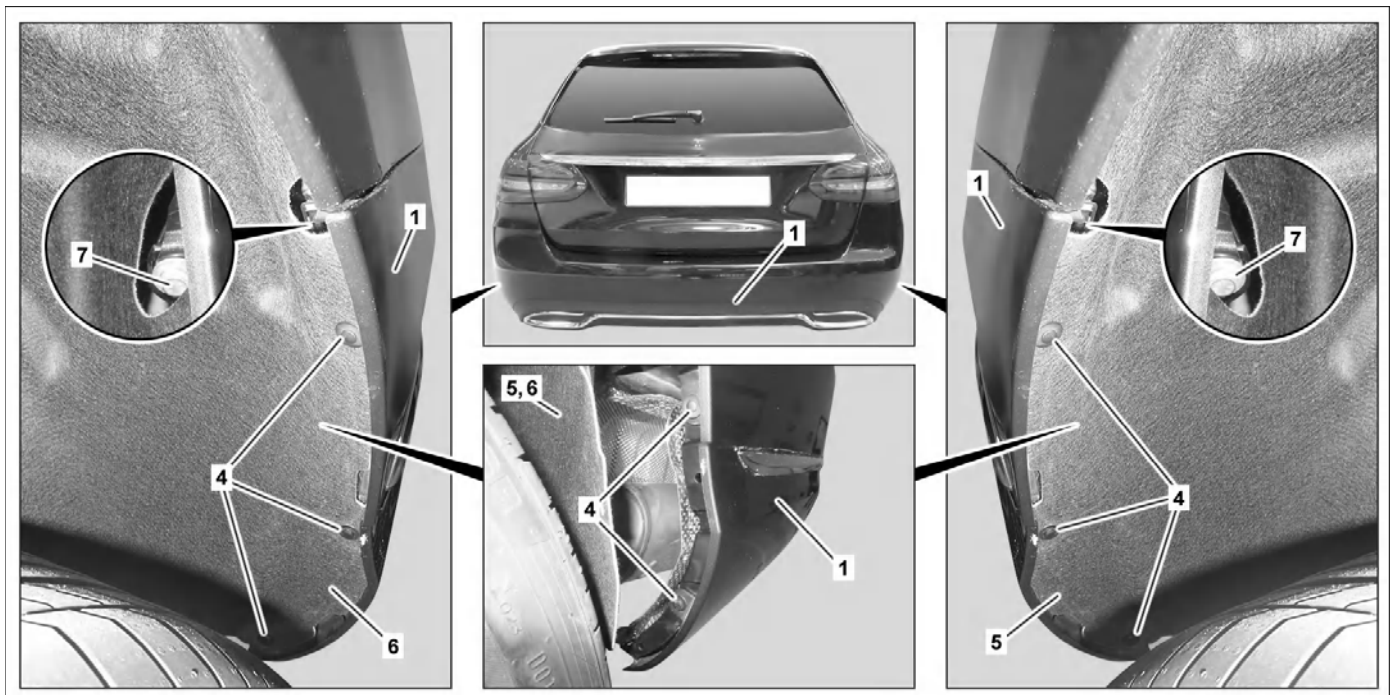

P88.20-4414-09

Shown on MODEL 205.2


- 1 Rear bumper
- 4 Expansion rivet
- 5 Right fender liner
- 6 Left fender liner
- 7 Screw

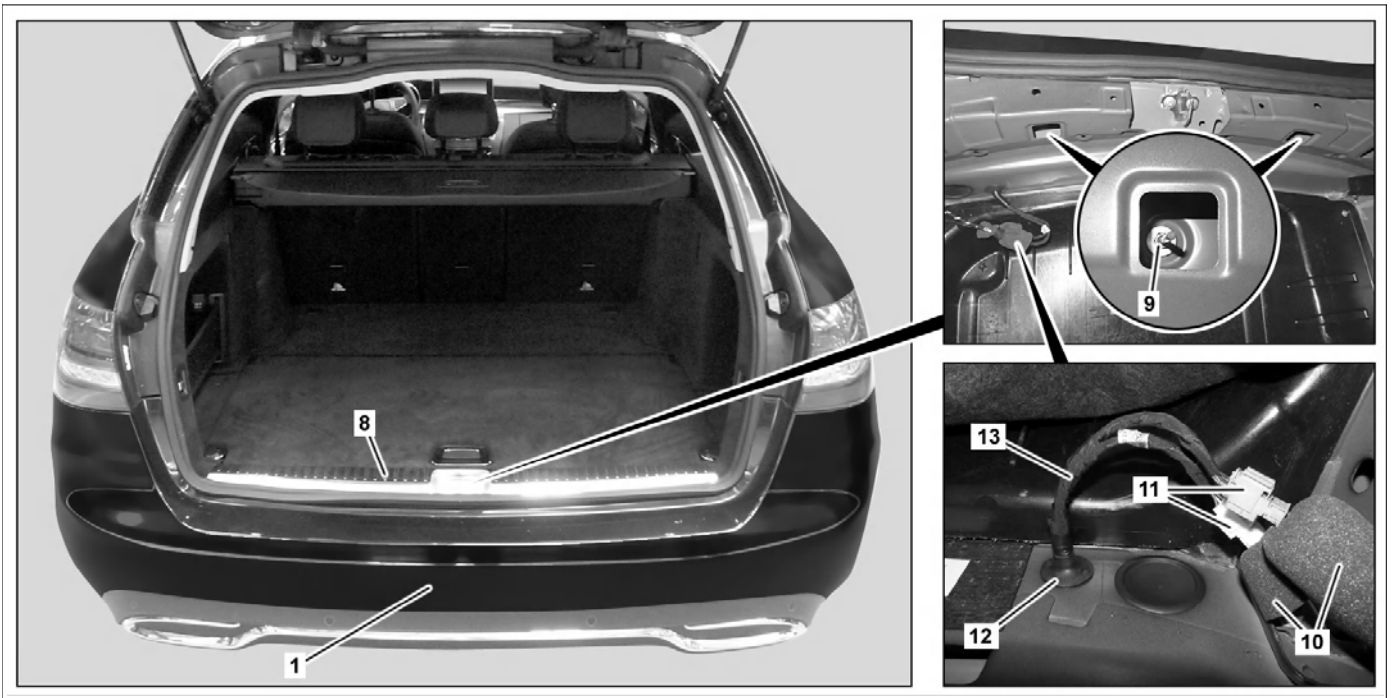

P88.20-4415-09

Shown on model 205.2 with code 235 (Active Parking Assist with PARKTRONIC) and with code 237 (Active Blind Spot Assist) and with code 238 (Active Lane Keeping Assist) and with code 253 (Rear collision warning and protection system) and with code P17 (KEYLESS-GO Package)





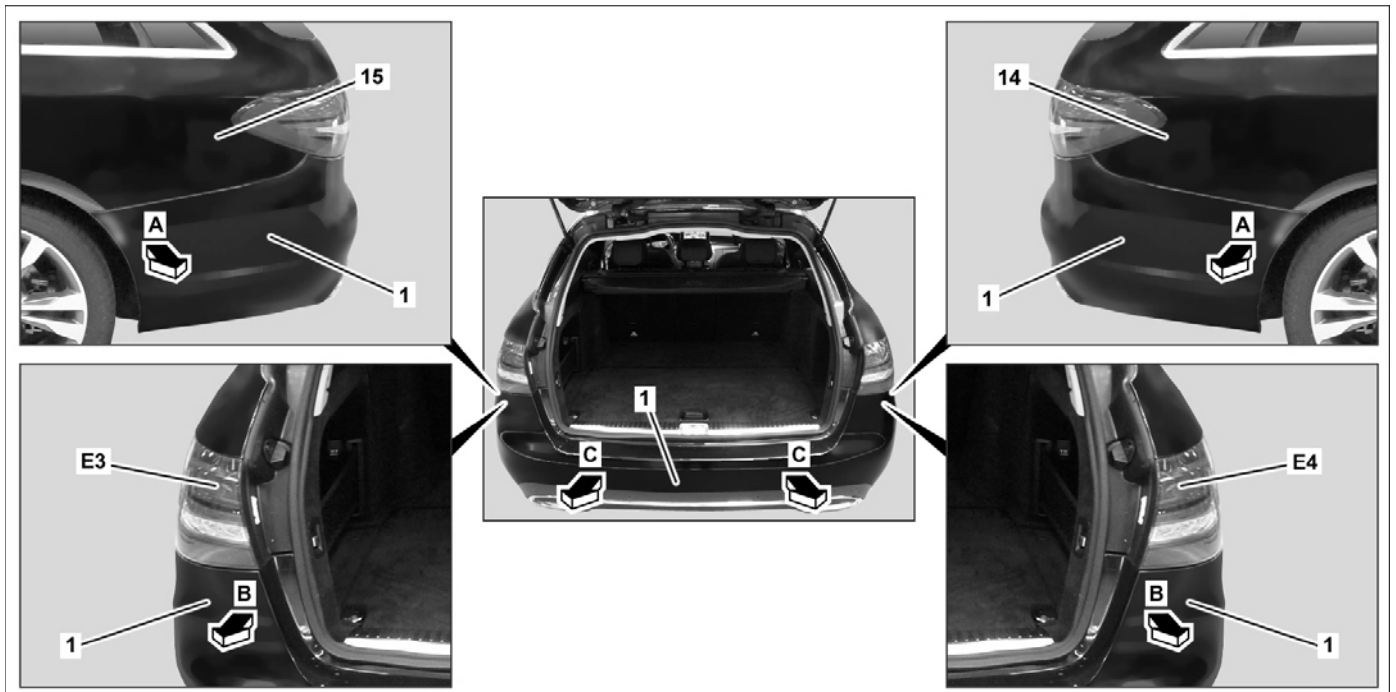








- | | | | |
|----|------------------------------|----|---------------------------|
| 1 | Rear bumper | 11 | Electrical connectors |
| 8 | Rear center section paneling | 12 | Grommet |
| 9 | Nut | 13 | Electrical wiring harness |
| 10 | Foam rubber jacketing | | |








P88.20-4416-09

Shown on MODEL 205.2

- | | | | |
|----|----------------------|----|----------------------|
| 1 | Rear bumper | E3 | Left rear lamp unit |
| 14 | Right rear side wall | E4 | Right rear lamp unit |
| 15 | Left rear side wall | | |


 Warning	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	No parts of the body or limbs should be within the operating area when the components are moving.	AS00.00-Z-0011-01A
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on HANDS-FREE ACCESS		AH80.61-P-0001-01A
	Remove/install		
1	Remove wheel arch liner from rear fenders.	Model 213.2 with code M035 (Allroad version)	AR88.80-P-0006LWT
2	Remove left rear lamp unit (E3) and right rear lamp unit (E4).		AR82.10-P-4731LWS
3	Raise vehicle.		AR00.60-P-1002LWG
4	Unscrew bolts (2).	 Model 213.2 with code M035 (Allroad version) Remove one screw (2) and one expansion rivet instead of the two screws (2).  Model 213.2 Dismantling tool	*000589956300
5	Remove expansion rivet (3).	Model 205.2  The number can vary according to equipment and engine.  Dismantling tool	*000589956300
6	Remove expansion rivets (4) from left fender liner (6) and right fender liner (5).	 Dismantling tool	*000589956300
7	Push left fender liner (6) and right fender liner (5) to side and remove expansion rivets (4) below.	 Model 213.2 with code M035 (Allroad version) Remove one expansion rivet (4).  Dismantling tool  Long wedge	*000589956300 *115589035900
8	Unscrew screws (7).		
9	Remove rear-end center section trim (8).	Model 205.2 Model 213.2	AR68.30-P-4785LWS AR68.30-P-4786LWT
10	Unscrew nuts (9).		
11	Fold back foam sleeves (10) and disconnect electrical connectors (11).	Model 205.2 with code 234 (Blind Spot Monitoring) Model 205.2 with code 235 (Active Parking Assist with PARKTRONIC) Model 205.2 with code 237 (Active Blind Spot Assist) Model 205.2 with code 238 (Active lane keeping Assist) Model 205.2 with code 253 (Rear impact warning and protection system) Model 205.2 with code P17 (KEYLESS-GO package)  Installation: Completely install foam rubber jacketing (10) on electrical connectors (11). Otherwise noise may occur.  The number of electrical connectors (11) can vary depending on the equipment installed.	
12	Guide electrical wiring harness (13) out of body together with grommet (12).	Model 205.2 with code 234 (Blind Spot Monitoring) Model 205.2 with code 235 (Active Parking Assist with PARKTRONIC) Model 205.2 with code 237 (Active Blind Spot Assist) Model 205.2 with code 238 (Active lane keeping Assist) Model 205.2 with code 253 (Rear impact warning and protection system) Model 205.2 with code P17 (KEYLESS-GO package)  Installation: Make sure that the grommet (12) is seated correctly.	
13	Mask left rear side wall (15) and right rear side wall (14).		

14	Disengage rear bumper (1) from left rear side wall (15) and right rear side wall (14) (arrows A).		
15	Disengage rear bumper (1) in area of left rear lamp unit (E3) and right rear lamp unit (E4) (arrows B).	 Helper required.	
16	Disengage rear bumper (1) (arrows C) and remove.	Model 205.2 Model 213.2 except code 234 (Blind Spot Monitoring) except code 235 (Active Parking Assist with PARKTRONIC) except code 237 (Active Blind Spot Assist) except code 238 (Active lane keeping Assist) except code 253 (Rear impact warning and protection system) except code P17 (KEYLESS-GO package)  Helper required.	
17	Disengage rear bumper (1) (arrows C) and remove until electrical connector is accessible.	Model 213.2 with code 234 (Blind Spot Monitoring) Model 213.2 with code 235 (Active Parking Assist with PARKTRONIC) Model 213.2 with code 237 (Active Blind Spot Assist) Model 213.2 with code 238 (Active lane keeping Assist) Model 213.2 with code 253 (Rear impact warning and protection system) Model 213.2 with code P17 (KEYLESS-GO package)  Helper required.	
18	Disconnect electrical connector and remove rear bumper (1).	Model 213.2 with code 234 (Blind Spot Monitoring) Model 213.2 with code 235 (Active Parking Assist with PARKTRONIC) Model 213.2 with code 237 (Active Blind Spot Assist) Model 213.2 with code 238 (Active lane keeping Assist) Model 213.2 with code 253 (Rear impact warning and protection system) Model 213.2 with code P17 (KEYLESS-GO package)  Helper required.	
19	Install in the reverse order.		

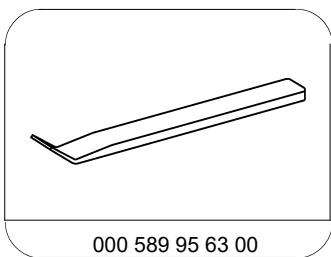

000 589 95 63 00

Dismantling tool

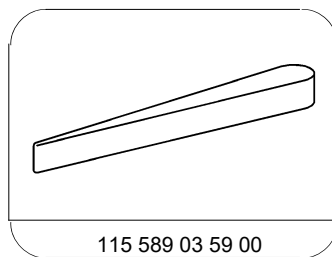

115 589 03 59 00

Long wedge