


- Model 205
with code 401 (Climatised front seats)
- Model 213
with code 401 (Climatised front seats)
- Model 238
with code 401 (Climatised front seats)
- Model 253, 293
with code 401 (Climatised front seats)

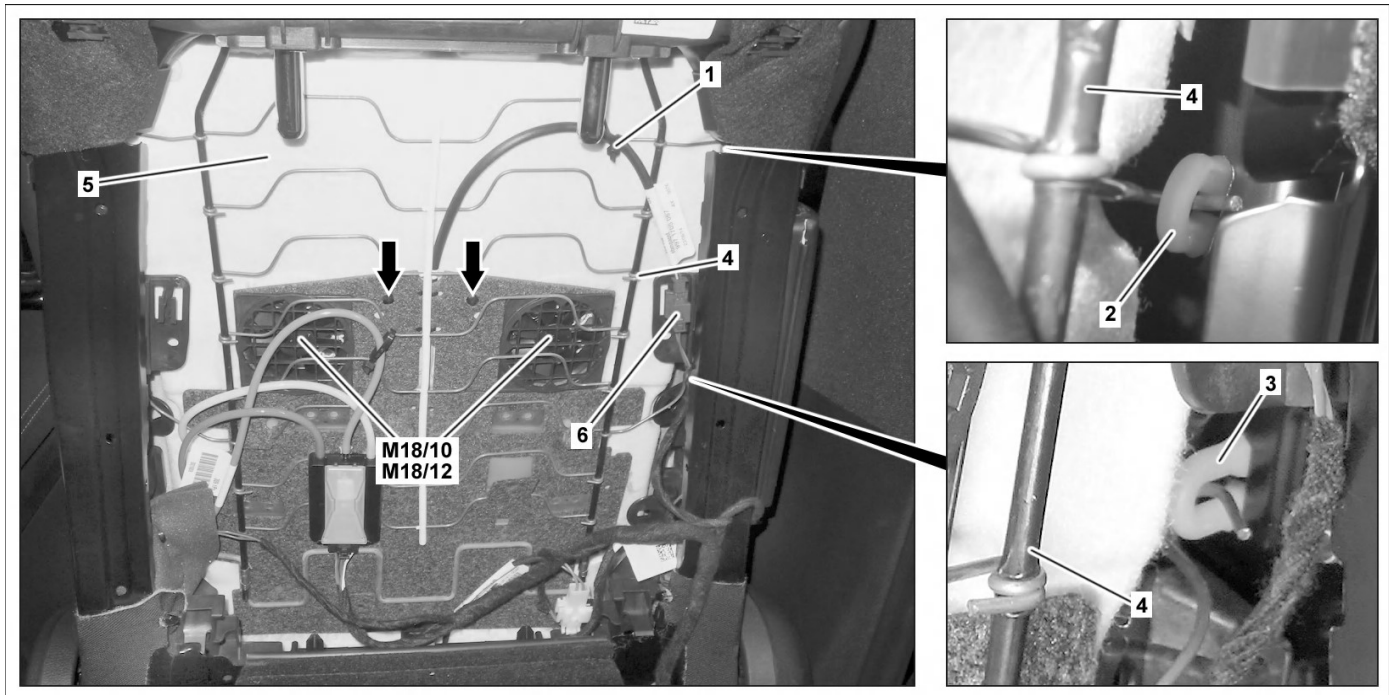


P91.30-2686-09

Shown on model 205.0

- | | | | |
|---|------------|--------|--|
| 1 | Cable tie | 5 | Backrest padding |
| 2 | Eyelet | 6 | Electrical connector |
| 3 | Eyelet | M18/10 | Left front backrest seat ventilation motors |
| 4 | Spring mat | M18/12 | Right front backrest seat ventilation motors |

- | | |
|--------|--|
| 6 | Electrical connector |
| M18/10 | Left front backrest seat ventilation motors |
| M18/12 | Right front backrest seat ventilation motors |

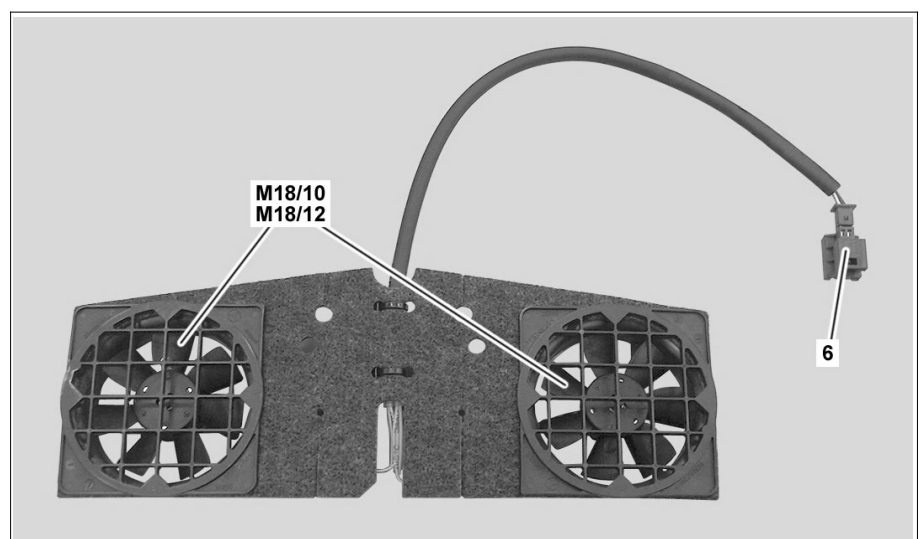

P91.30-2687-05



Remove/install

1	Remove seat backrest trim at seat backrest.	Model 205.0/1/2 with code 401 (Climatised front seats) except code 555 (AMG Performance seats) Model 213 with code 401 (Climatised front seats) except code 555 (AMG Performance seats) Model 253 with code 401 (Climatised front seats) except code 555 (AMG Performance seats) Model 293 with code 401 (Climatised front seats) Model 205.3/4 with code 401 (Climatised front seats) except code 555 (AMG Performance seats) Model 238 with code 401 (Climatised front seats)	AR91.10-P-1912LW AR91.10-P-1912CLW
2	Remove cable tie (1).	i Installation: Replace the cable tie (1).	
3	Disconnect electrical connection (6).		
4	Release plug housing of electrical connector (6) on seat backrest frame and remove.		
5	Unhook spring mat (4) on one side from eyelets (2, 3).		
6	Unclip left front seat backrest seat ventilation motors (M18/10) or right front seat backrest seat ventilation motors (M18/12) from seat backrest padding (5) (arrows).		
7	Lift spring mat (4) and remove left front seat backrest seat ventilation motors (M18/10) or right front seat backrest seat ventilation motors (M18/12).	i Observe routing of electrical wiring harness.	
8	Install in the reverse order		