


Model 213

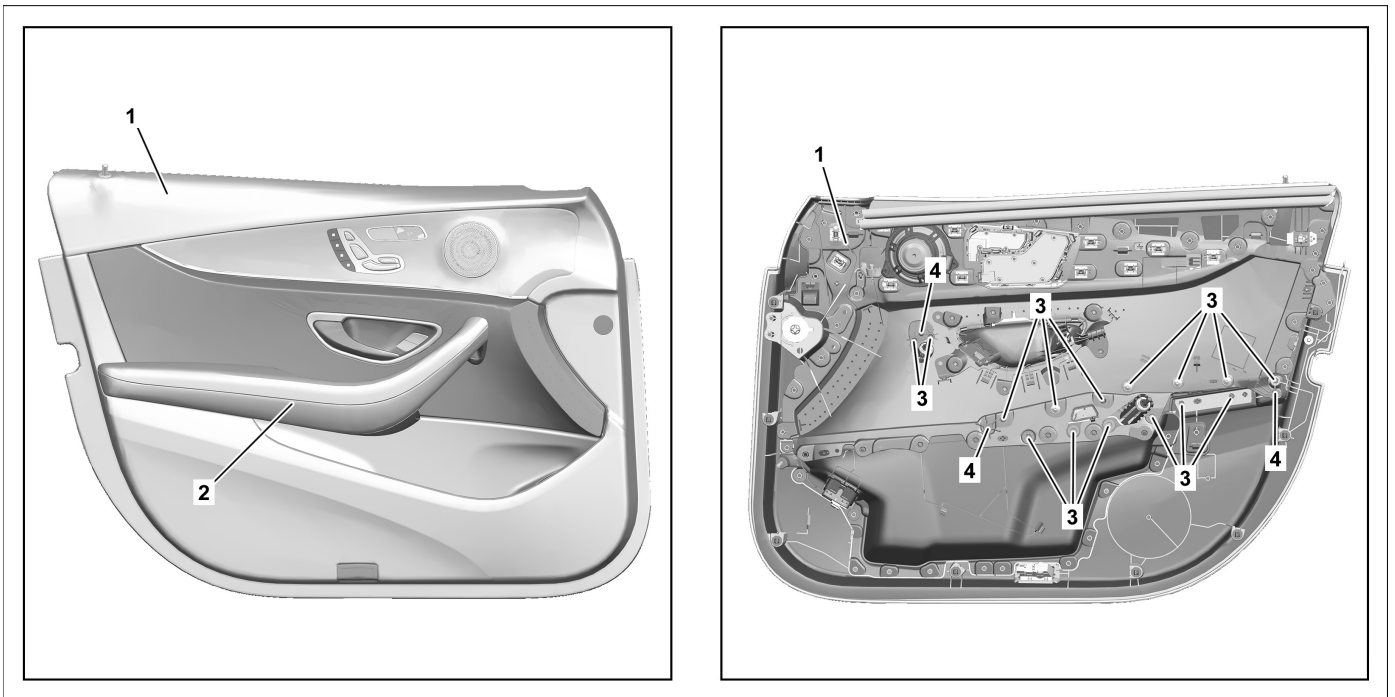

P72.10-A003-09

## Shown on left door lining (1)

1 Door lining  
2 Armrest

3 Plastic spot welds  
4 Screw

☒ ☒	Remove/install		
1	Remove door lining (1).		AR72.10-P-1000LW
2	Unscrew screw/bolts (4).		
3.1	Drill plastic spot welds (3) and remove armrest (2).	If the armrest (2) is fastened with plastic spot welds (3).  <b>i</b> <b>Installation:</b> Replace drilled plastic spot welds (3) with bolts. Fasten armrest (2) with the screws from the repair kit.	AR72.00-P-0001-01LW
3.2	Remove screws and remove armrest (2).	If the armrest (2) is fastened with screws.	
4	Install in the reverse order		