
**MODEL 164.8** 

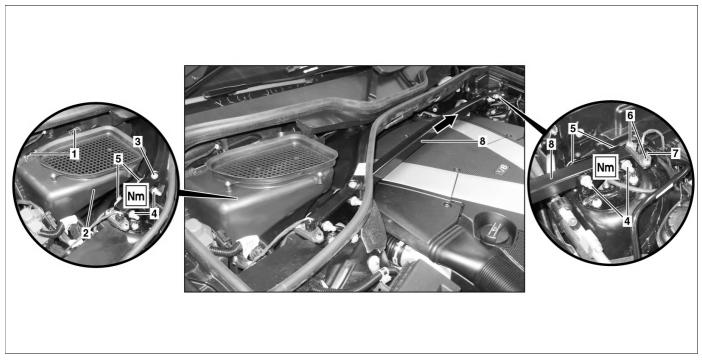

P62.30-2913-09

## Shown on model 164.8 with engine 629

- Clips
- 2 3 Air conditioning air inlet
- Screw
- Nuts

- 5 Bolts
- 6 Nuts
- Left ADS sensor bracket
- Strut tower brace

## **Modification notes**

25.7.08 "Wax bolted connections" added Step 6	*BR00.45-Z-1018-05A
---	---------------------

XX	Remove/install		
1	Open engine hood		AR88.40-P-1000GZ
2	Loosen clamps (1), remove air conditioning air inlet (2) upward	i Installation: Bottom lug on air conditioning air inlet (2) should reach into corresponding guide.	
3	Unscrew nuts (6), place left ADS sensor bracket (7) to one side	i Do not disconnect left ADS sensor (7) electrically.	
4	Remove bolt (3)		
5	Unscrew nuts (4)	Nm	*BA62.30-P-1005-02D
6	Remove bolts (5) toward rear	i Installation: Wax bolted connections.	*BR00.45-Z-1018-05A
7	Slightly raise strut tower brace (8) on left side and remove left toward (arrow)	i Installation: Check whether rubber seal, through which the strut tower brace (8) runs, is correctly seated.	
8	Install in the reverse order		

## Nm Front end assembly with front reinforcement

Number	Designation	Model 164.8
BA62.30-P-1005-02D	Nut, for dome strut bolted connection to Nm bracket	50

## Repair materials

Number	Designation	Order number
1 10111001	Boolgilation	Oraci namboi

BR00.45-Z-1018-05A Wax for the engine compartment (400 ml spray can) A 000 986 33 70 10