

AN31.19-P-8080-03GZ	Connect wiring harness	Model 164 with USA version	
---------------------	------------------------	----------------------------	--

1 Route the wiring harness (5) of the trailer hitch (2) and guide into the interior.



2 Fasten rubber (6) in place.

i Dispose of rubber (6) fitted at the plant.

3 Fasten wiring harness (5) using tie strap (7) to trailer hitch (2).

4 Fasten wiring harness (5) using tie strap (8) in interior.

Shown on model 164.1

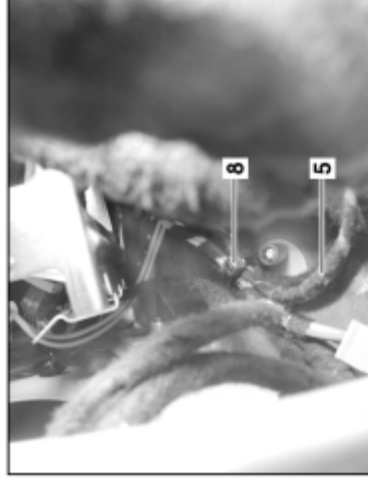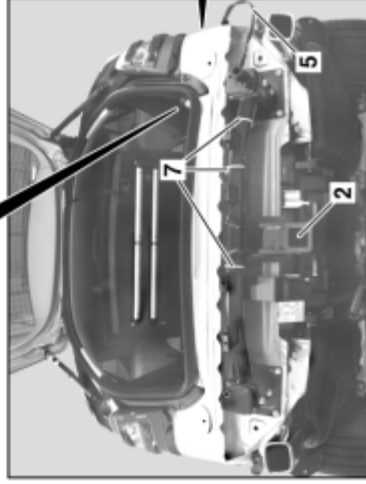

5 Insert fuses (9) into load compartment fuse and relay box (F4) and fasten ground cable (10) in place.

i The fuses (9) are color-coded.

P31.19-2255-06