



MODEL 166

- 1 Covers
- 2 Lower door lining
- 3 Bolts
- 4 Clips
- 5 Center door lining
- 6 Clips
- 7 Lugs
- 8 Right upper door lining
- 9 Clips
- 10 Left upper door lining
- 11 Clips

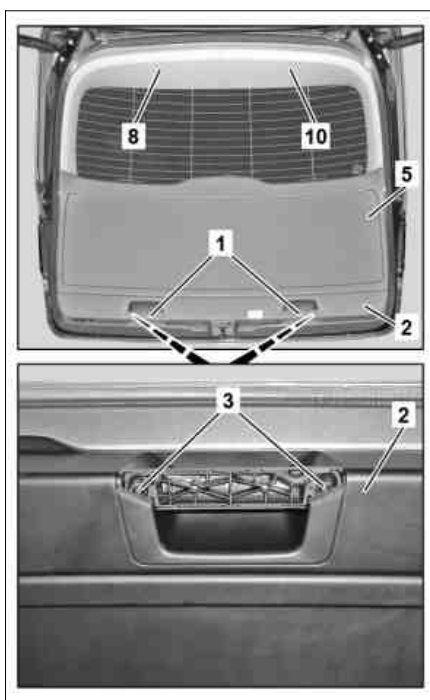


P72.20-3095-03

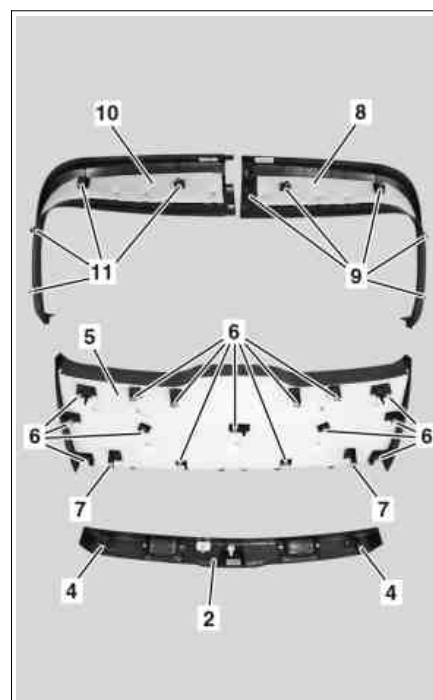

P72.20-3096-03

	Remove/install		
1	Unclip cover (1) from front side of lower door lining (2)	Slightly tap against assembly wedge to loosen covers; do not unclip covers (1) by twisting assembly wedge. Place rag over assembly wedge to protect lower door lining (2). Otherwise covers (1) and lower door lining (2) can be damaged. Mounting wedge	*110589035900
2	Remove screws/bolts (3)		
3	Unclip lower door liner (2) from clips (4)	Mounting wedge	*110589035900
4	Disconnect electrical connectors	Number of electrical connectors can vary according to vehicle equipment.	
5	Unclip center door liner (5) from clips (6)	Start edge of center door lining (5). Mounting wedge	*110589035900
6	Unhook center door lining (5) from shackles (7)	Installation: Hook center door lining (5) first into both shackles (7).	
7	Unclip right upper door lining (8) from clips (9)	Mounting wedge	*110589035900
8	Unclip upper left door lining (10) from clips (11)	Mounting wedge	*110589035900
9	Install in the reverse order		

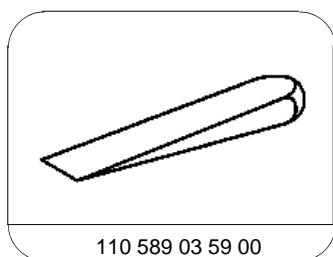

110 589 03 59 00

Mounting wedge