


MODEL 156

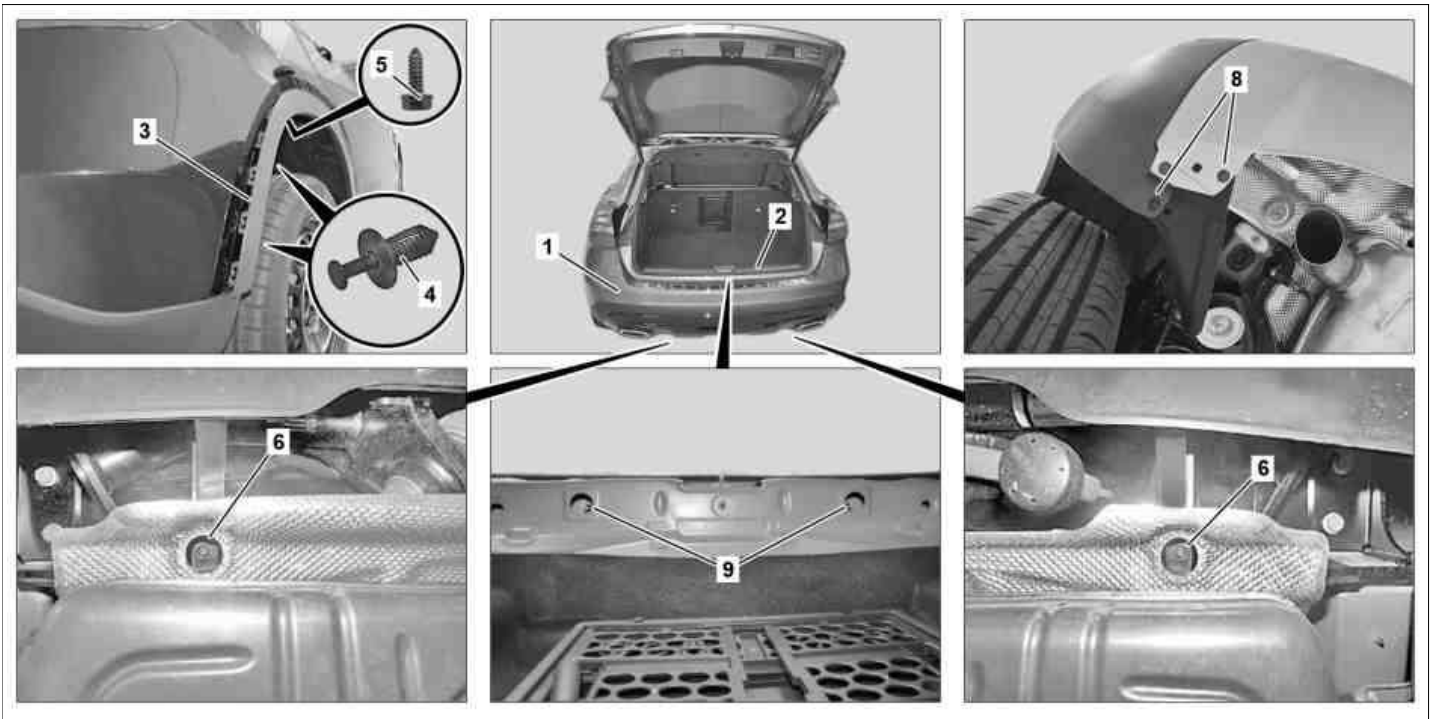


P88.20-4174-09

- 1 Rear bumper
- 2 Paneling on rear center section
- 3 Paneling on rear wheel arch

- 4 Expansion clips
- 5 Screw
- 6 Screw

- 8 Expansion clips
- 9 Nuts

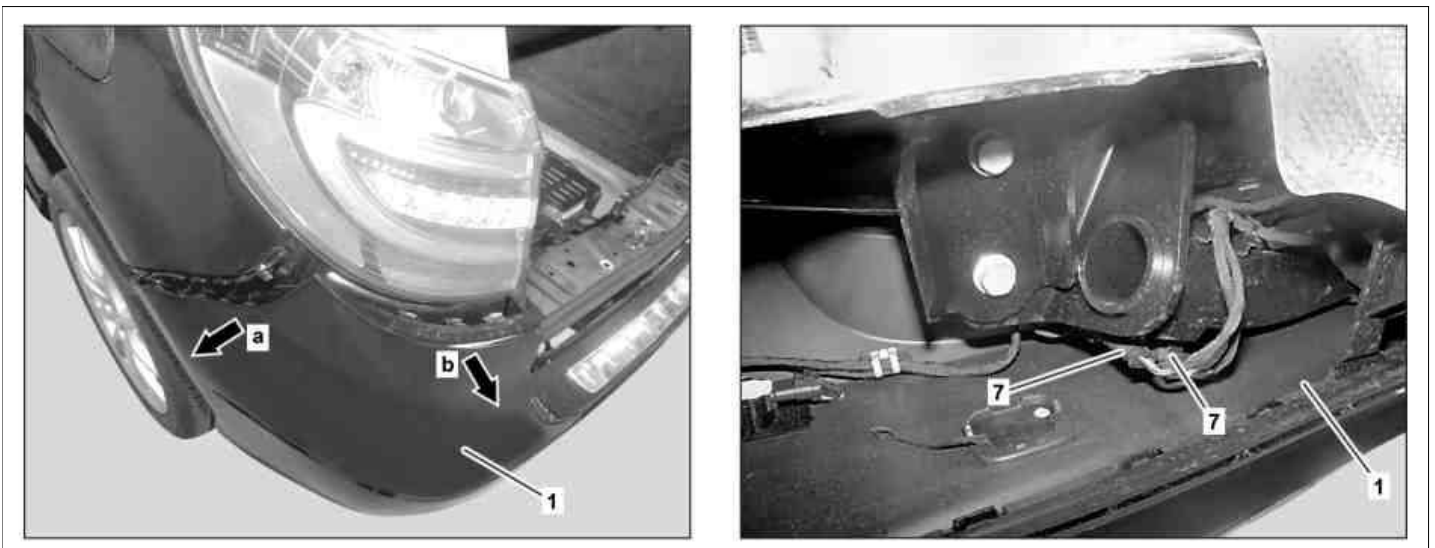


P88.20-4214-08

- 1 Rear bumper


- 7 Electrical connector

- 1 Rear bumper
- 10 Screw

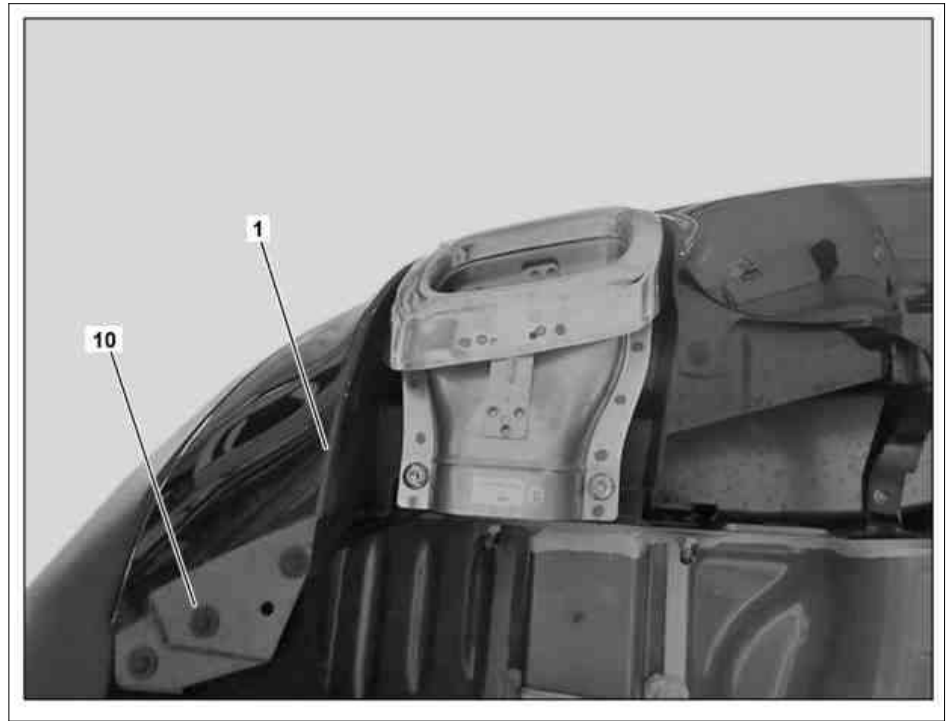

P88.20-4176-06

☒ ☒	Remove/install		
1	Remove paneling from rear center section (2)		AR68.30-P-4785NKA
2	Unscrew nuts (9)	i Use pipe or socket wrench to unscrew nuts (9).	
3	Raise vehicle with vehicle lift		AR00.60-P-1000AK
4	Remove screw/bolts (6)		
5	Remove expansion clips (8)		
6	Unscrew bolts (10) on left and right sides	MODEL 156 with ENGINE 270, 651 with CODE P55 (Night package) MODEL 156 with ENGINE 270, 651 with CODE P59 (Urban) MODEL 156 with CODE 772 (AMG bodystyling)	
7	Unclip paneling from rear wheel arch (3) on left and right in area of rear bumper (1)		
8	Remove expansion clips (4)		
9	Remove bolts (5)	! Slightly pull fender liner toward front in area of rear bumper (1). So that bolts (5) are accessible.	
10	Unclip rear bumper (1) in direction of arrow (a)		
11	Unclip rear bumper (1) in direction of arrow (b)		
12	Remove rear bumper (1) until electrical connectors (7) are accessible		
13	Disconnect electrical connectors (7)	i The number of electrical connectors (7) depends on the vehicle equipment.	
14	Remove rear bumper (1)		
15	Install in the reverse order		
☒	Check		
16	Check whether PARKTRONIC or active parking assist is ready for operation	MODEL 156 with CODE 220 (PARKTRONIC) MODEL 156 with CODE 235 (Active Park Assist) i Switch on ignition and PARKTRONIC, engage reverse gear and release parking brake. The PARKTRONIC automatically performs a self-test and the operational readiness is signaled via the warning indicators.	

17	Check whether blind spot assist is ready for operation	MODEL 156 with CODE 234 (Blind Spot Monitoring)  Switch on ignition. The operation and warning indicators in the outside mirrors illuminate red and then yellow.	
----	--	---	--