



- 1 Trim ring
- 2 Right cover
- 3 Screw
- 4 Air nozzles
- 5 Air vent
- 6 Trim strip
- 7 Electrical connector
- 8 Electrical connector
- 9 Hazard warning flasher switch block

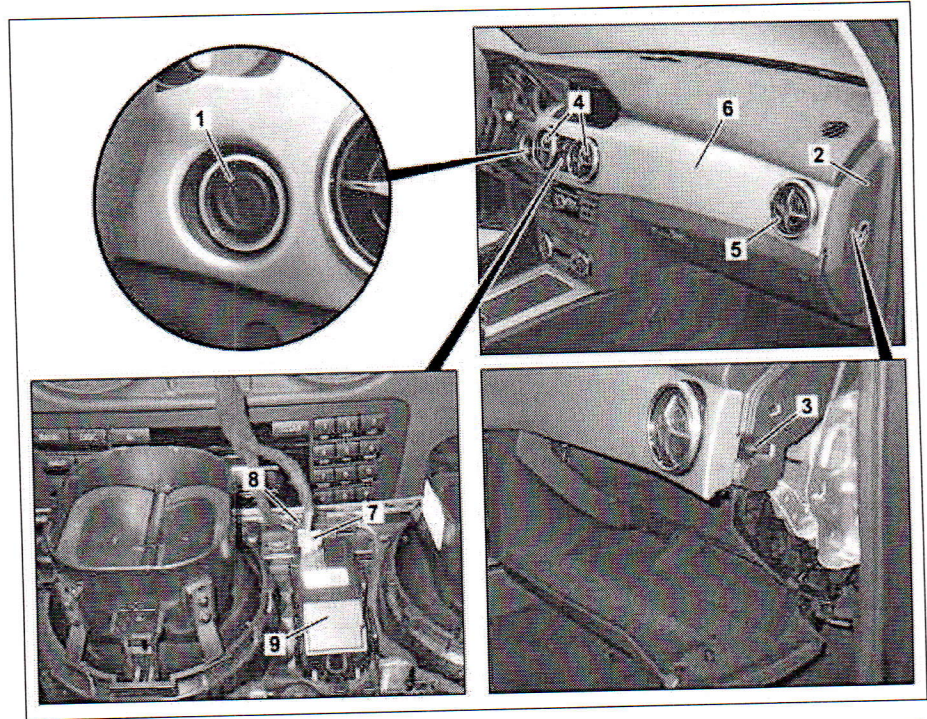

P68.10-4532-06


- 10 Left cover
- 11 Screw
- 12 Air vent
- 13 Trim strip
- 14 Electrical connector

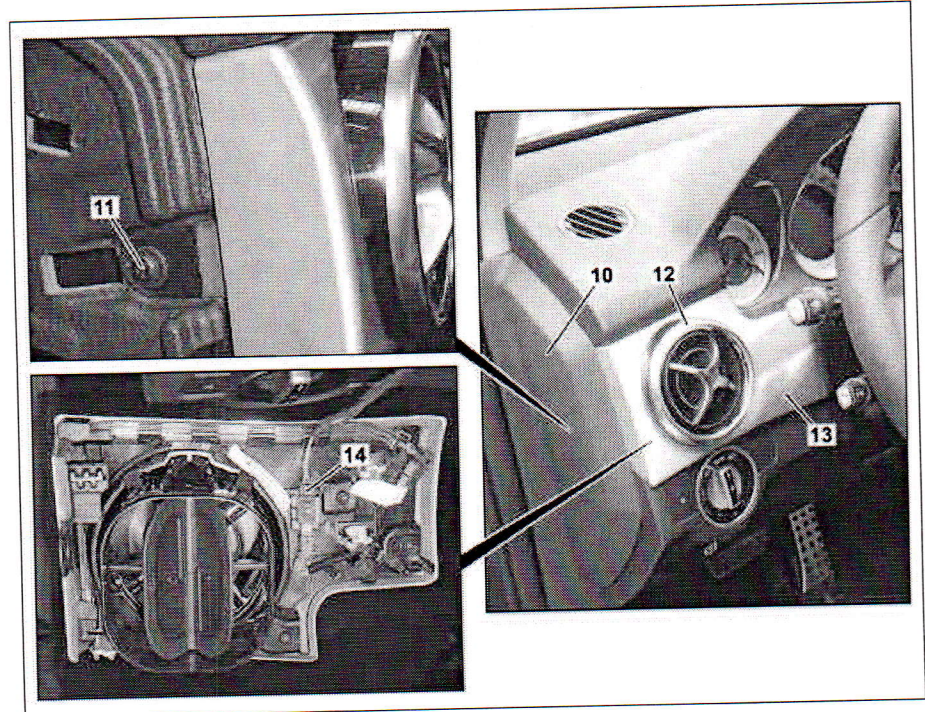

P68.10-4531-06


	Remove/install		
1	Switch off ignition and remove transmitter key (A8/1) or KEYLESS-GO start/stop button (S2/3) from electronic ignition lock control unit (N73)	i KEYLESS-GO start/stop button only on vehicles with code (889) Keyless-Go	
2	Unscrew trim ring (1) from electronic ignition lock	☑ Claw-type wrench for rosette on ignition/starter switch	*210589000700
3	Open glove box and unclip right cover (2)	☑ Mounting wedge	*110589035900
4	Unscrew bolt (3)		
5	Remove side air vent (5)	When replacing trim strip (6)	AR83.10-P-4740W

6	Remove center air vent (4)	When replacing trim strip (6)	AR83.10-P-4503W
7	Unclip trim strip (6) and remove until electrical connectors (7, 8) are accessible	⚠ Removal: Unclip carefully and remove. Otherwise the selector lever on the steering wheel can be damaged. 🔧 Mounting wedge	*110589035900
8	Disconnect electrical connector (7)		
9	Disconnect electrical connector (8)	MODEL 204.9 as of model year 2013 with CODE 877 (ambient lighting)	
10	Unclip hazard warning flasher switch block (9)	When replacing trim strip (6)	
11	Remove side air vent (12)	When replacing trim strip (13)	
12	Unclip left cover (10)	🔧 Mounting wedge	*110589035900
13	Remove bolt (11)		
14	Unclip trim strip (13) and remove until electrical connector (14) is accessible	🔧 Mounting wedge	*110589035900
15	Disconnect electrical connector (14)	MODEL 204.9 as of model year 2013 with CODE 877 (ambient lighting)	
16	Install in the reverse order		

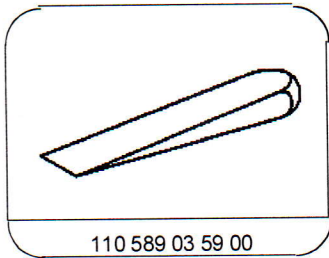

110 589 03 59 00

Mounting wedge

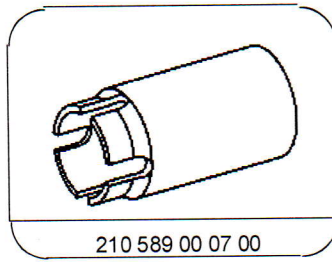

210 589 00 07 00

Claw-type wrench for rosette on ignition/
starter switch