


Model 167

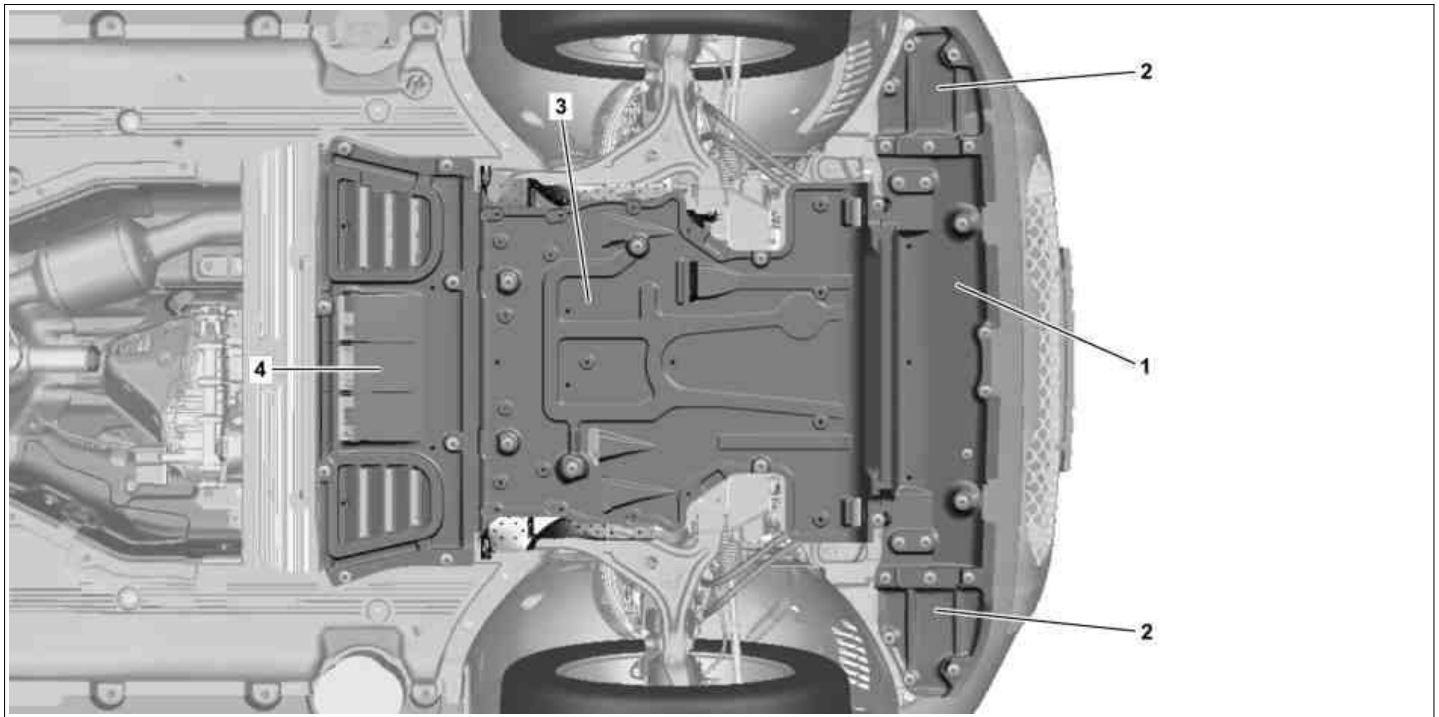

P61.20-A007-09

Shown on model 167.1 with code 430 (Off-road package)

- 1 Front engine compartment paneling      3 Center engine compartment paneling      4 Rear engine compartment paneling  
 2 Front cover

	<b>Warning</b>	<b>Risk of injury</b> from engine start by remote start function	Prior to starting work, open engine hood, do not reach into rotation range or hazard area of freely rotating parts, wear closed and snug-fitting work clothes	AS00.00-Z-0024-01A
	<b>Remove/install</b>			
1	Open hood.		Model 167 with code 26U (Preinstallation for engine remote start)	
2	Lift vehicle with lifting platform.			AR00.60-P-1006A
3	Remove front engine compartment lining (1).	Model 167 with code 430 (Offroad package) Model 167 with code 481 (Sump shield)Screw/bolt, underride guard		*BA61.40-P-1001-01D
4	Remove left and/or right front cover (2).	Model 167 with code 430 (Offroad package) Model 167 with code 481 (Sump shield)		
5	Remove center engine compartment lining (3).	Model 167 with code 430 (Offroad package) Model 167 with code 481 (Sump shield)Screw/bolt, underride guard		*BA61.40-P-1001-01D
6	Remove rear engine compartment lining (4).			
7	Install in the reverse order.			

**Nm** Underride guard

<b>Number</b>	<b>Designation</b>	<b>Model 167 with code 430 (Offroad package) Model 167 with code 481 (Sump shield)</b>
BA61.40-P-1001-01D	Screw/bolt, underride guard	Nm 17