






Model 167

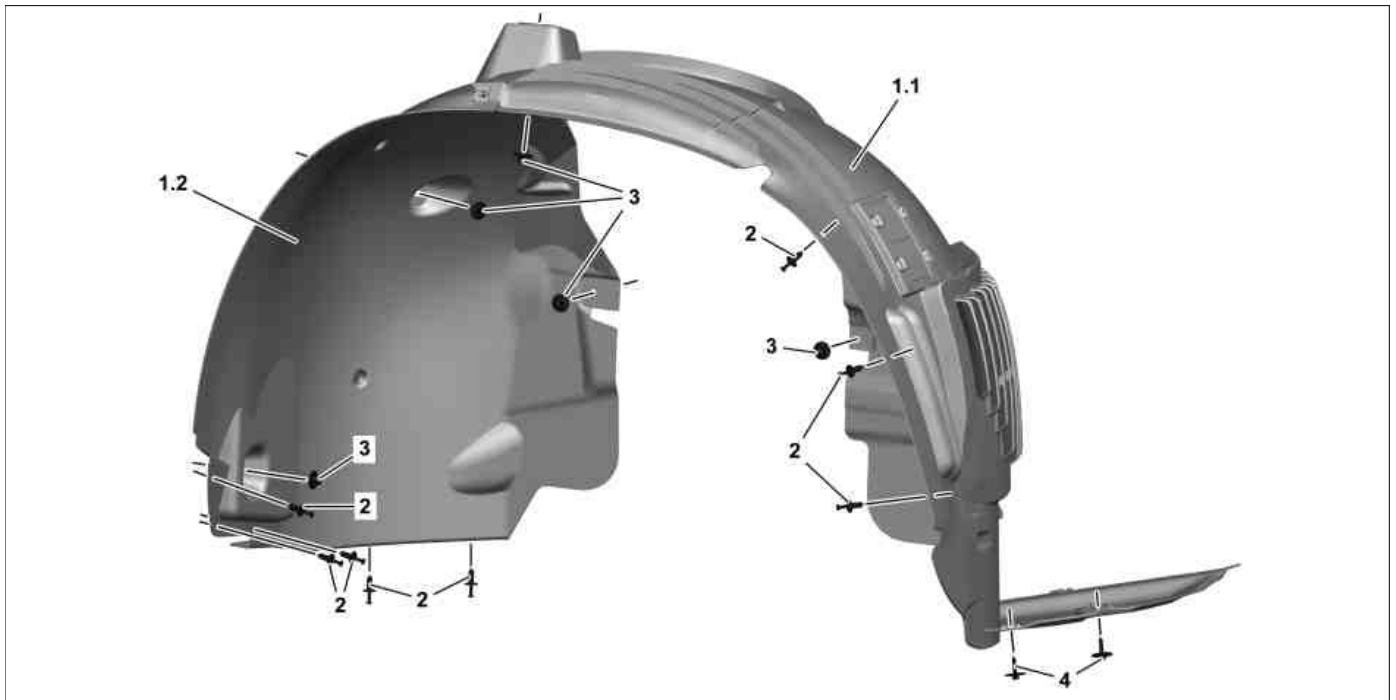


P88.10-2352-09

**Shown on right side of vehicle**

- 1.1 Fender liner front section
- 1.2 Fender liner rear section
- 2 Expansion rivet
- 3 Nuts
- 4 Bolts

 	Remove/install		
1	Raise vehicle.		AR00.60-P-1006A
2	Remove expansion rivets (2).	 Dismantling tool	*000589956300
3	Unscrew nuts (3).		
4	Unscrew screw/bolts (4).	 The number of screws (4) can vary.	
5	Pull outer edges of the fender liner front section (1.1) and fender liner rear section (1.2) inward out of the wheel arch lip and remove fender liner front section (1.1) and fender liner rear section (1.2).		
6	Install in the reverse order		

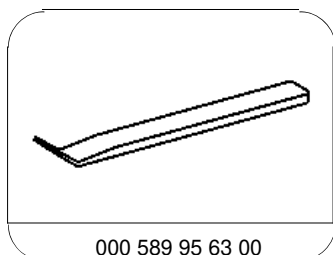

Dismantling tool