AR07.07-P-1454A Page 1 of 2

ve/install hot film mass air flow sensor together with air intake pipe 1.10.96
--

ENGINE 112.942 in MODEL 163.154 ENGINE 112.970 in MODEL 163.157

## Shown on Engine 112

1/2 Right crankcase vent line 2 Air cleaner 2/1 Resonance housing 2/2 Air intake tube 2/3 Bolt B2/5 Hot film mass air flow sensor

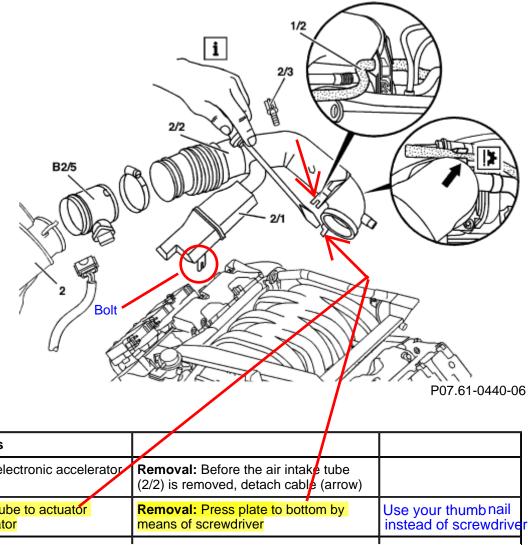


Fig. item, etc.	Work instructions			
(1)	Cable actuator of electronic accelerator	Removal: Before the air intake (2/2) is removed, detach cable (		
i	Lock of air intake tube to actuator electronic accelerator	Removal: Press plate to bottom means of screwdriver	n by	Use your thumb nail instead of screwdrive

Be extremely careful pressing the tab down. If you break it you will have to buy a new one. AR07.07-P-1454A Page 2 of 2

1/2	Right crankcase vent line	Installation: Slip-on from below	
2	Air filter		
2/1	Resonance housing	Detach from above out of the rubber mounting	
2/2	Air intake pipe	Bolt (2/3)	
B2/5	Hot film MAF sensor	Unplug electrical connector. Slacken hose clamp	