


MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

Illustrated on model 163 up to 31.08.01


- 1 Stowage compartment
- 2 Screws
- 3 Stowage box
- 4 Screws
- 5 Armrest cover

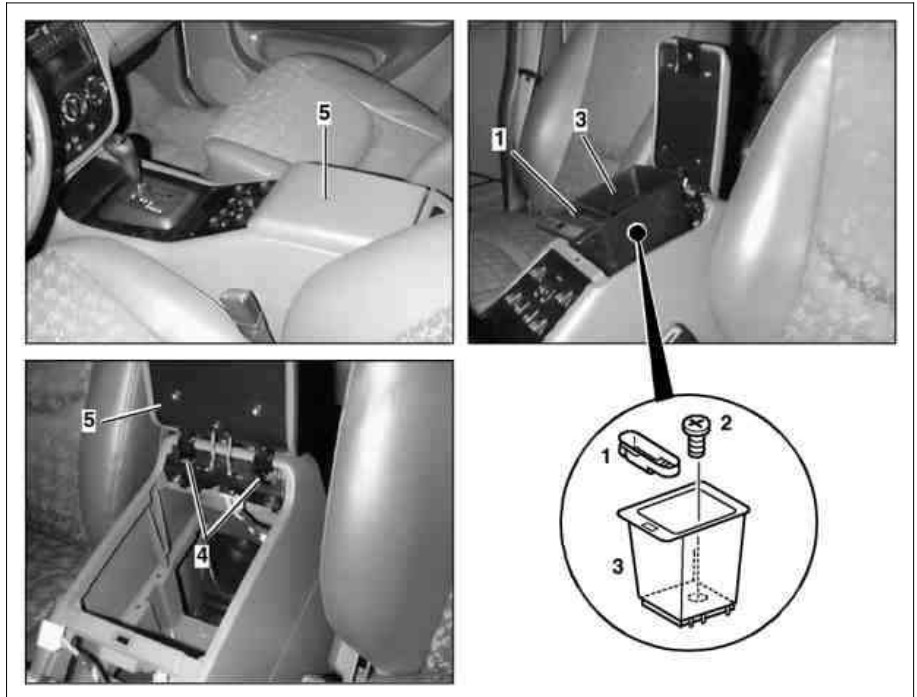

P68.20-0461-06


Illustrated on model 163 as of 01.09.01

- 4 Bolts
- 5 Armrest cover
- 6 Access openings

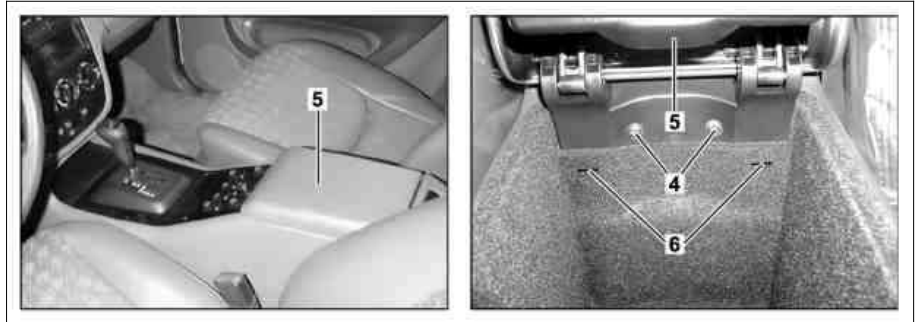

P68.20-2544-04

☒ ☒	Removing, installing		
1.1	Remove storage compartment (1)	<b>i</b> Up to 31.08.01: Unclip stowage compartment (1) from stowage box (3)	
2.1	Unscrew screws (2) and remove stowage box (3)	<b>i</b> up to 31.08.01	
3	Unscrew screws (4).		
4	Remove armrest lid (5)	<b>i</b> As of 01.09.01: Insert long wedge into access openings (6) and loosen retaining lugs. <b>☑</b> Long wedge	<a href="#">*115589035900</a>
5	Install in the reverse order		

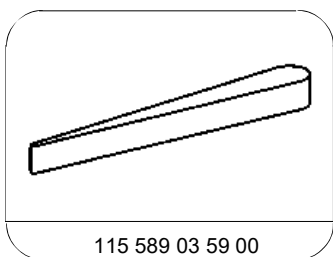

115 589 03 59 00

Assembly wedge