MODEL 163.113 /154 /174 #A as of 289565, 163.113 #X as of 754620, 163.128 /157 /175

- 1 Armrest cover
- 2 Stowage box
- 3 Bolts
- 4 Cover on shift lever
- 5 Plastic screws






P68.20-2545-01

P68.20-2456-01

X	Remove/install		
1	Remove armrest lid (1)		AR68.20-P-2370GH
2	Remove plastic screws (5)		
3	Remove stowage box (2)	Press the pin in the center of the rivet downwards for about 4 mm; then remove the rivet from above.	
4	Remove selector lever paneling	S Long wedge	*115589035900
5	Unscrew bolts (3)		
6	Remove cover (4) from above	i Carefully prize open at front (arrows) and at the sides. Substitute of the sides	*115589035900
7		i 3 connector.	
8	Install in the reverse order		

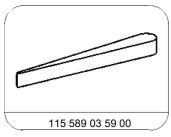

Assembly wedge