


MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

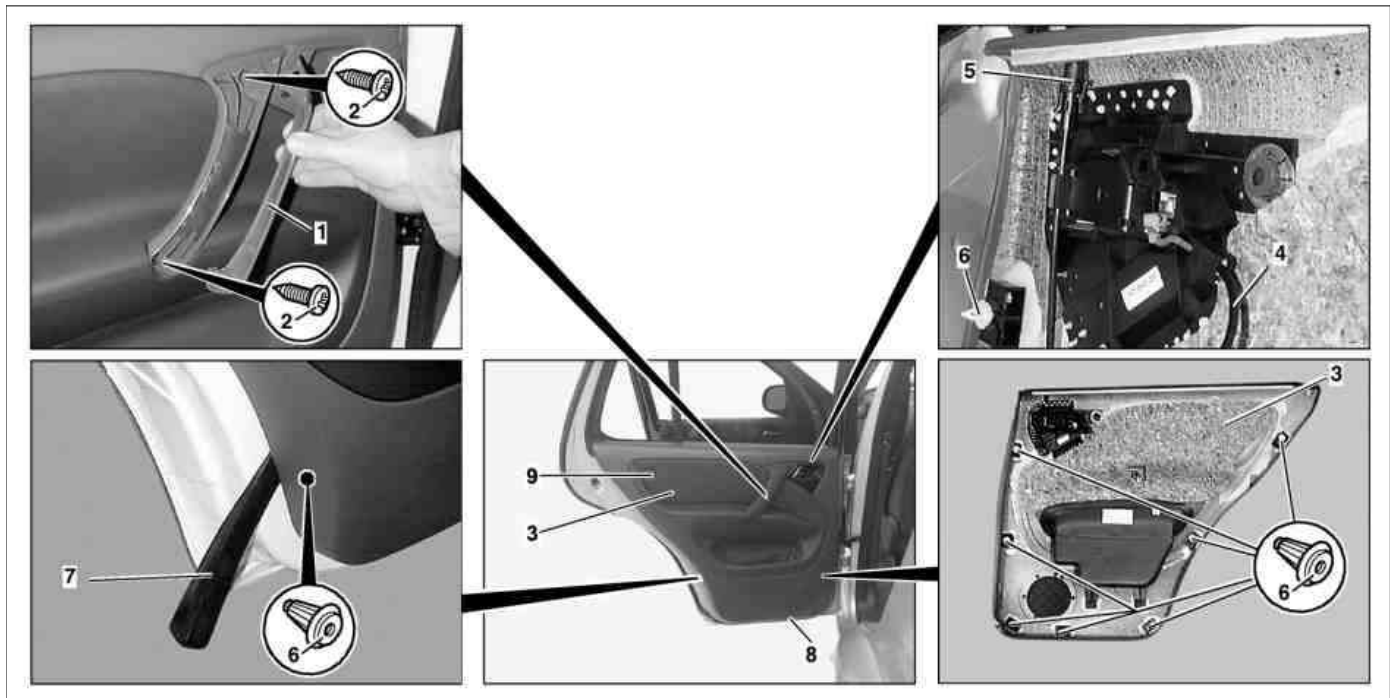








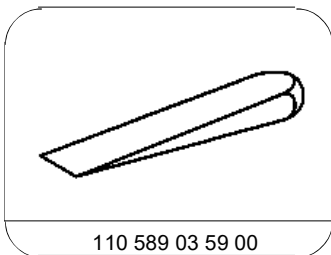
P72.12-2061-09

1 Door handle cover  
2 Bolt  
3 Door liner

4 Bowden cable  
5 Inner lock  
6 Clips

7 Assembly wedge  
8 Entrance lamp  
9 Bolt

 	Remove/install		
1	Open crank window		
2	Remove cover for door handle (1)		
3	Unscrew screw (2)		
4.1	Unclip SRS panel and unscrew screw (9)	 As of vehicle identification number A145273, X708319.	
5	Press door liner (3) off of bottom, front and rear inner door panel with assembly wedge (7)	 Position assembly wedge directly next to clips  Assembly wedge	*110589035900
6	Lift door liner (3) up and out		
7	Unhook control cable (4) on inner door actuating mechanism		
8	Unclip inner lock (5) on door liner (3)		
9.1	Remove entrance lamp (8)	 As of vehicle identification number A145273, X708319.	
10	Lay down door liner		
11	Check foil and sheet metal clip nuts on inner door panel	 Replace damaged foil. Replace all clips.	
12	Install in the reverse order		



110 589 03 59 00

Assembly wedge