


MODEL 164



Shown on model 164.1 with Keyless Go, code 889

- 1 Underlay
- 2 Electrical connector
- 3 Underlay
- 4 Door handle

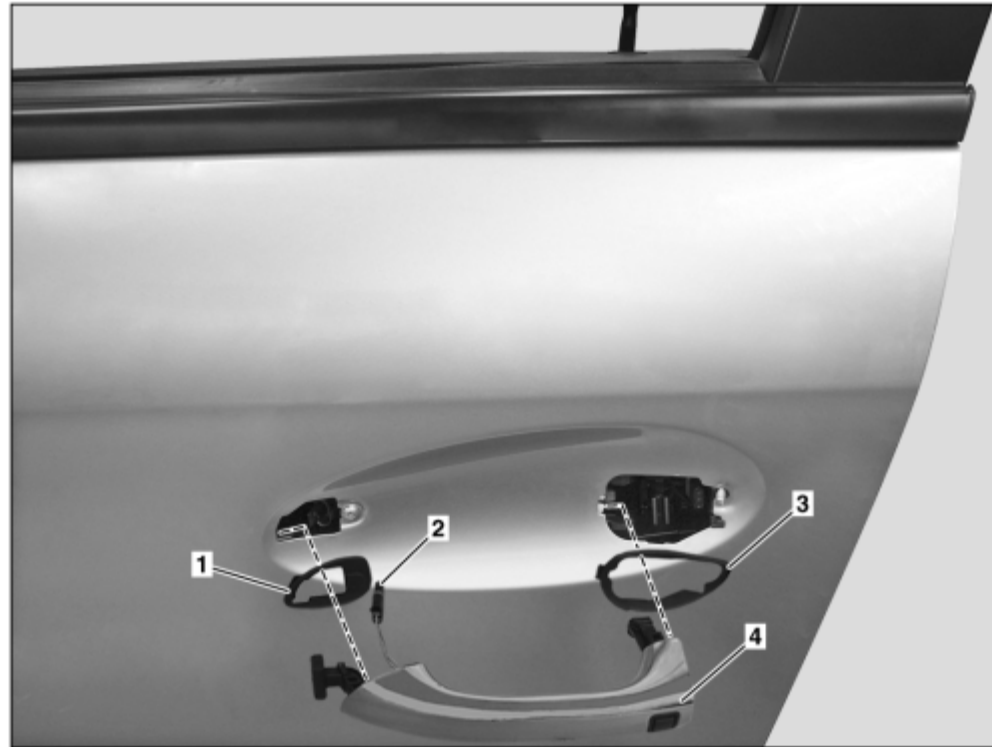


P72.10-3133-06

- 2 Electrical connector
- 4 Door handle

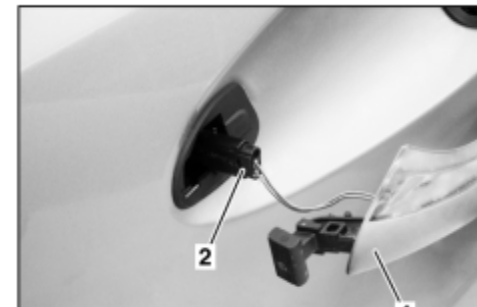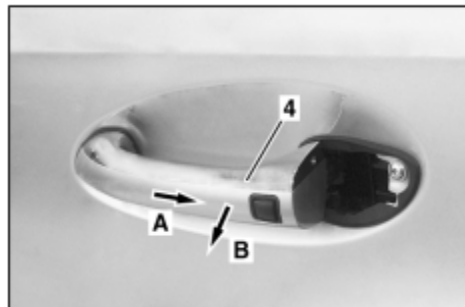


P72.10-3134-04

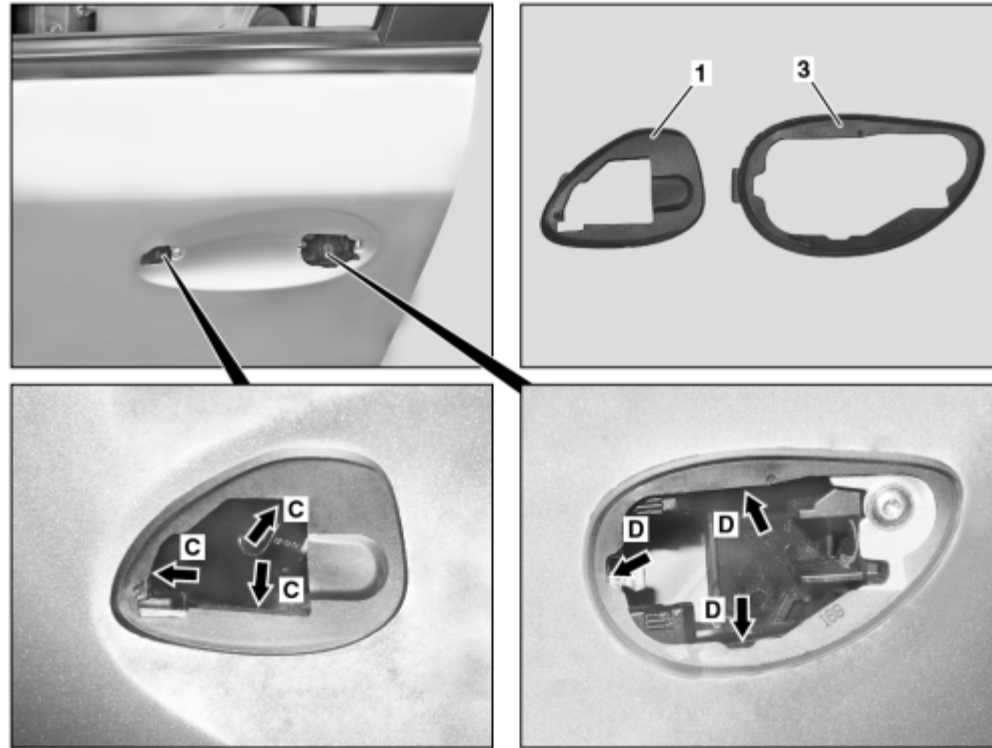








1 Underlay
3 Underlay

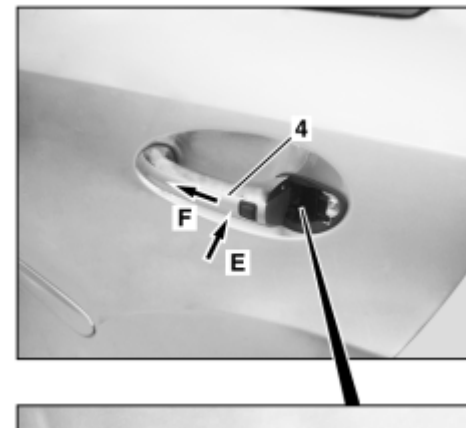

P72.10-3135-06

4 Door handle



	Removing		
1	Remove lock cylinder from front door		AR72.10-P-4015GZ
2	Push door handle (4) slightly toward rear (arrow A) and remove from door (arrow B)	 Do not damage paint!	
3.1	Disconnect electrical connector (2)	 On vehicles with keyless go, code 889.	
	Install		
4	Insert underlay (1, 3) in door	 Make sure that underlays are fitted correctly and in good condition; install new underlays if necessary. The underlays must be attached with their mounting tabs correctly inserted in the recesses in the door (arrows C and D).	
5.1	Connect electrical connector (2)	 On vehicles with keyless go, code 889.	
6	Insert door handle (4) (arrow E) and slide toward front (arrow F).	 Ensure that door handle (4) is inserted properly (arrows G), otherwise the door handle (4) cannot be moved toward front far enough for installation.	
		 Do not damage paint!	
		 Ensure that subsurfaces do not move when inserting the door handle (4).	
7	Install front door lock cylinder		AR72.10-P-4015GZ
8	Perform a function test		