



MODEL 164

**Shown on vehicle with Keyless Go,
code 889**

- 1 Underlay
- 2 Electrical connector
- 3 Underlay
- 4 Cover
- 5 Bolt
- 6 Guide
- 7 Door handle

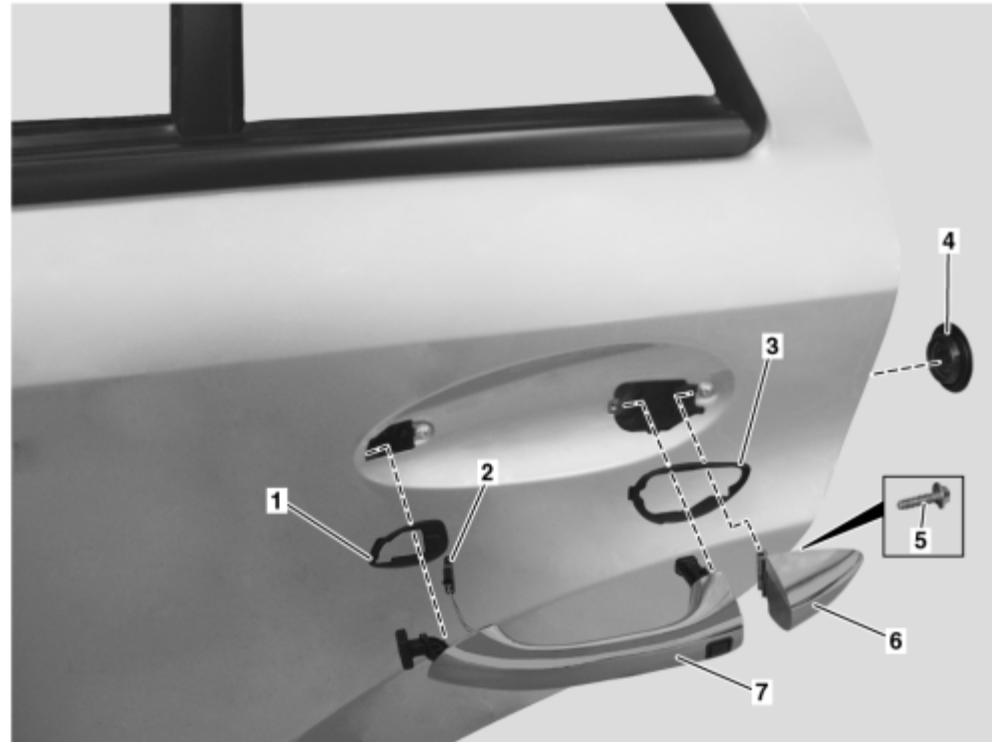

P72.12-2552-06

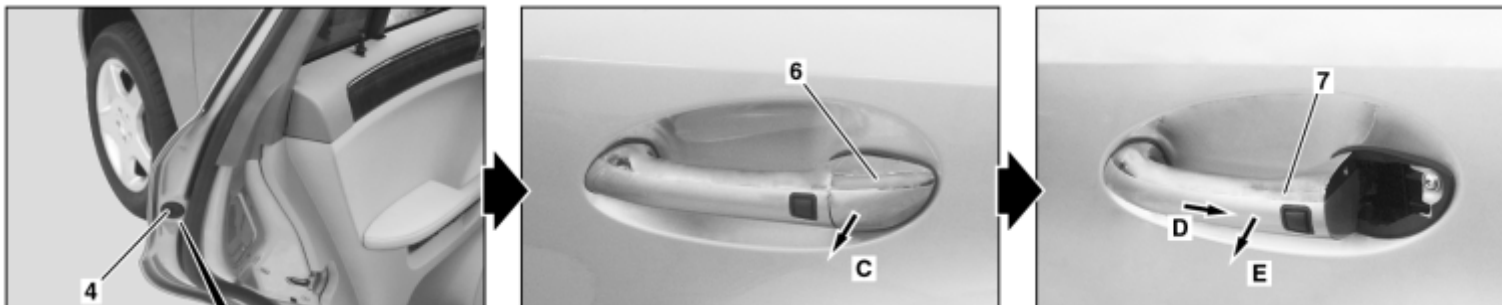


- 2 Electrical connector
- 4 Cover
- 5 Bolt

- 6 Guide
- 7 Door handle








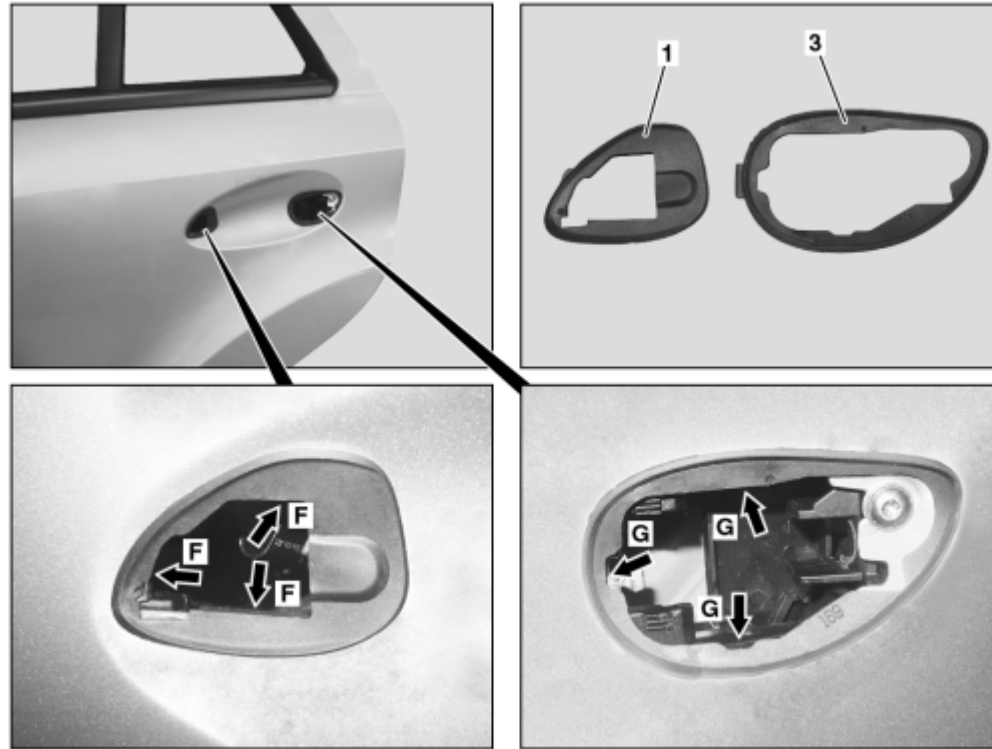



Shown on model 164.1

- 1 Underlay
- 3 Underlay



- 7 Door handle



	Remove		
1	Remove cover (4).		
2	Loosen bolt (5) and pull out guide (arrow C)	 It is not possible to unscrew the bolt completely (5) when the guide (6) is installed; bolt serves as clamping bolt. It can only be turned a few turns!	
		 Loosen guide (6): When the bolt (5) is turned counterclockwise (arrow), the guide (6) is loosened.	
3	Slightly slide door handle (7) toward rear (arrow D) and then remove (arrow E).	 Do not damage paint!	
4.1	Disconnect electrical connector (2)	 On vehicles with Keyless Go, code 889.	
	Install		
5	Ensure that subsurfaces (1, 3) are seated correctly and in proper state	 The subsurface (1, 3) should be fastened properly with fastening lugs (arrows F and G).	
6.1	Connect electrical connector (2)	 On vehicles with Keyless Go, code 889.	
7	Insert door handle (arrow H) and slide toward front (arrow I)	 Ensure that the door handle is inserted correctly (arrow J), otherwise the door handle cannot be moved toward front far enough for installation.	
		 Do not damage paint!	
		 Ensure that the subsurface (1, 3) does not move when inserting the door handle.	
8	Completely screw bolt (5) into guide (6) and insert guide into door handle.		

9	Fasten guide (6) and tighten bolt (5) with correct tightening torque.	i Fastening guide (6): When the bolt (5) is turned clockwise (arrow B), the guide is tensioned (6).	
		Nm	BA72.12-P-1001-01K
10	Install cover (4)	i Ensure that the cover is positioned correctly.	

Nm Rear door

Number	Designation	Model 164.1/8
BA72.12-P-1001-01K	Bolt for clamping guide in door handle mechanism	Nm 3