


AR72.10-P-1000GZ

Remove/install front door lining

14.11.05

MODEL 164

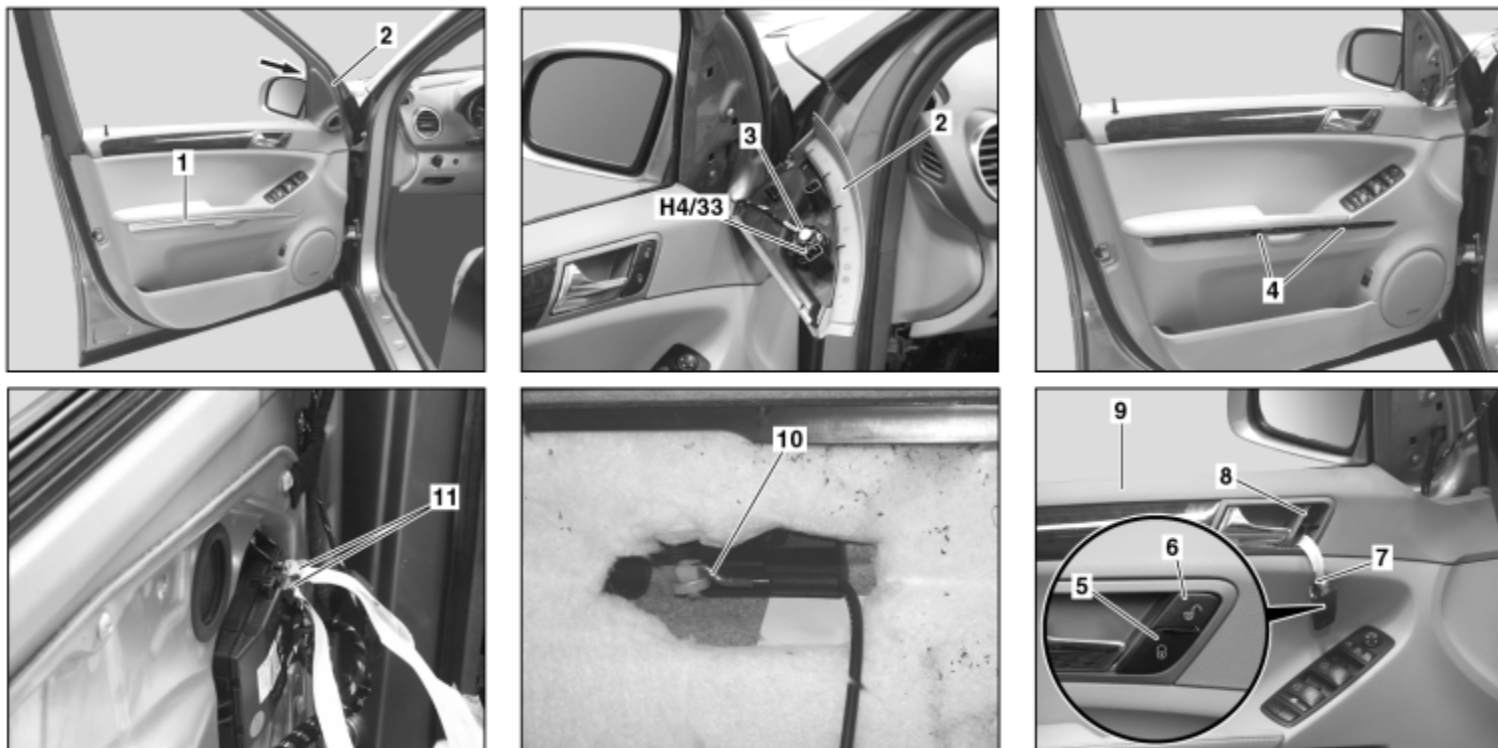











P72.10-3045-09

**Shown on model 164.1 with automatic rear-end door,
code 890**

- 1 Trim strip
- 2 Mirror triangle cover
- 3 Electrical connector
- 4 Screws
- 6 Central locking switch
- 7 Electrical connector

- 8 Screw
- 9 Door lining
- 10 Control cable
- 11 Electrical connectors

H4/33 Left front door tweeter

|  | Remove/install | | |
|---|---|---|----------------------------------|
| 1 | Switch off ignition and remove the transmitter key from the EIS [EZS] control unit |  On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m). | |
| 2 | Pry trim strip (1) off door lining (9) |  Mounting wedge | 110 589 03 59 00 |
| 3 | Unclip mirror triangle cover (2) |  Unclip the mirror triangle cover (2) at the top (arrow). | |
| | |  Mounting wedge | 110 589 03 59 00 |
| 4 | Disconnect electrical connector (3) from left front door tweeter (H4/33) | | |
| 5 | Remove screws (4) | | |
| 6 | Press both central locking buttons simultaneously; remove central locking switch (6) from door lining (9) |  Pull the tab visible between the central locking buttons. Do not disconnect the electrical connector (7) from the central locking switch (6). | |
| 7 | Remove screw (8) | | |
| 8 | Pry off door lining (9) |  Unclip the clips at the bottom and side of the door lining in order to prevent the clip holder from breaking off. Installation: Replace damaged clips. | |
| | |  Mounting wedge | 110 589 03 59 00 |
| 9 | Lift door lining (9) upwards and inwards |  In order to provide access to the Bowden cable (10). | |
| 10 | Detach Bowden cable (10) from inside of door opener | | |
| 11 | Separate electrical connectors (11) |  Handle the ribbon cable with care to prevent damage. | |

| | | | |
|----|------------------------------|--|--|
| 12 | Remove door liner (9) | | |
| 13 | Install in the reverse order | | |



110 589 03 59 00

Mounting wedge