


**Document title** Add bumper cutout

**Document number** an3111p808002gz

- 1 Place shock absorber (1) on workbench.
- 2 Make cutout at marking (2) in bumper (1).
- 3 Deburr cutout.

**Shown on model 164.1**

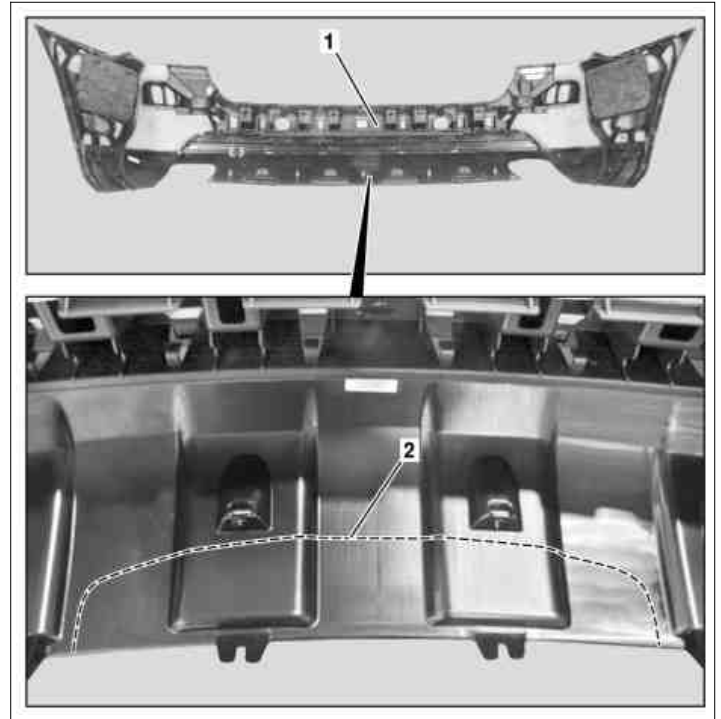

P31.11-2179-12