


Document title Connect wiring harness

Document number an3119p808003gzb

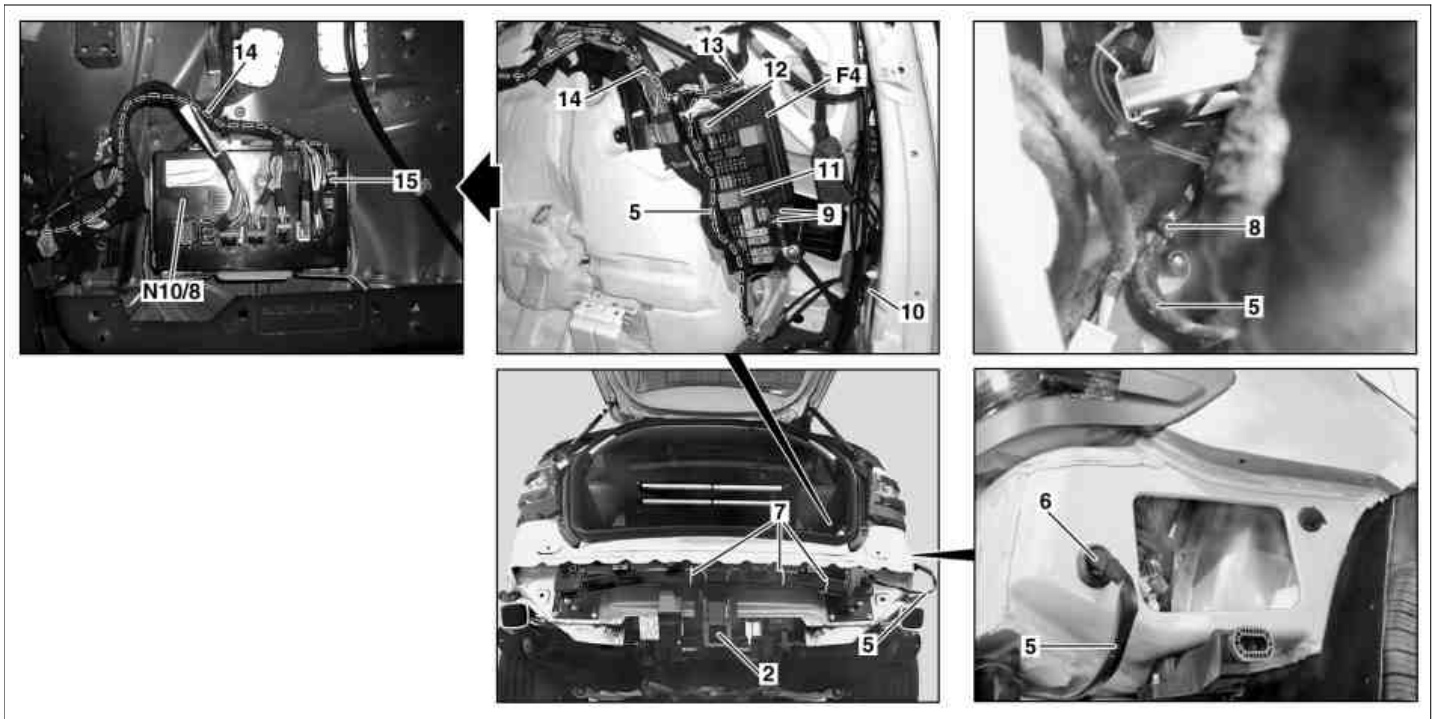

P31.19-2477-09

- 1 Route the wiring harness (5) of the trailer hitch (2) and guide into the interior .
- 2 Fasten rubber grommet (6).
 Dispose of rubber grommet (6) at factory.
- 3 Fasten wiring harness (5) using cable tie (7) to trailer hitch (2).
- 4 Fasten wiring harness (5) using cable tie (8) in interior.
- 5 Insert fuse carrier (9) into load compartment fuse and relay box (F4) and fasten ground cable (10) in place.
 The fuses are color-coded.
- 6 Insert relay (11, 12).
 If not present.
- 7 Fasten electrical connector (13) of wiring harness (14) to fuse and relay box in cargo area (F4).
- 8 Fasten electrical connector of wiring harness (5) for AHV (2) to wiring harness (14).
- 9 Route wiring harness (14) along vehicle wiring harness to the rear SAM control unit (N10/8).
 Rear SAM control unit (N10/8) is under the 40% rear seat.
- 10 Fasten electrical connector (15) of wiring harness (14) to rear SAM control unit (N10/8).
- 11 To prevent noises, secure excess lines with cable tie.