


Document title Connect wiring harness

Document number an3119p808003gza

AN31.19-P-8080-03GZA	Connect wiring harness	Model 164.1 up to model year 2009 Model 164.8	
----------------------	------------------------	--	--

- 1 Route the wiring harness (5) of the trailer hitch (2) and guide into the interior.
- 2 Fasten rubber grommet (6).
i Dispose of ex-factory rubber grommet (6).
- 3 Fasten wiring harness (5) using cable tie (7) to trailer hitch (2).
- 4 Fasten wiring harness (5) using cable tie (8) in interior.

Trailer hitch shown on model 164.1 in USA version code 494

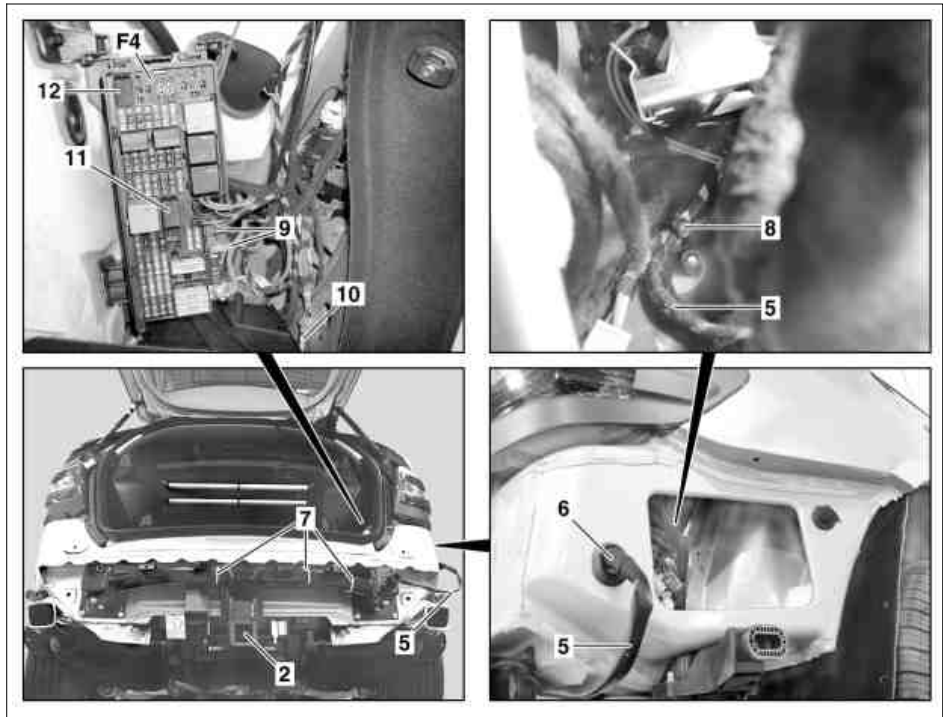

P31.19-2324-06

- 5 Insert fuse carrier (9) into load compartment fuse and relay box (F4) and fasten ground cable (10) in place.
i The fuses are color-coded.
- 6 Insert relay (11).
i If not present.

Only for vehicles from 12.06

- 7 Insert relay (12).
i If not present.