


MODEL 164

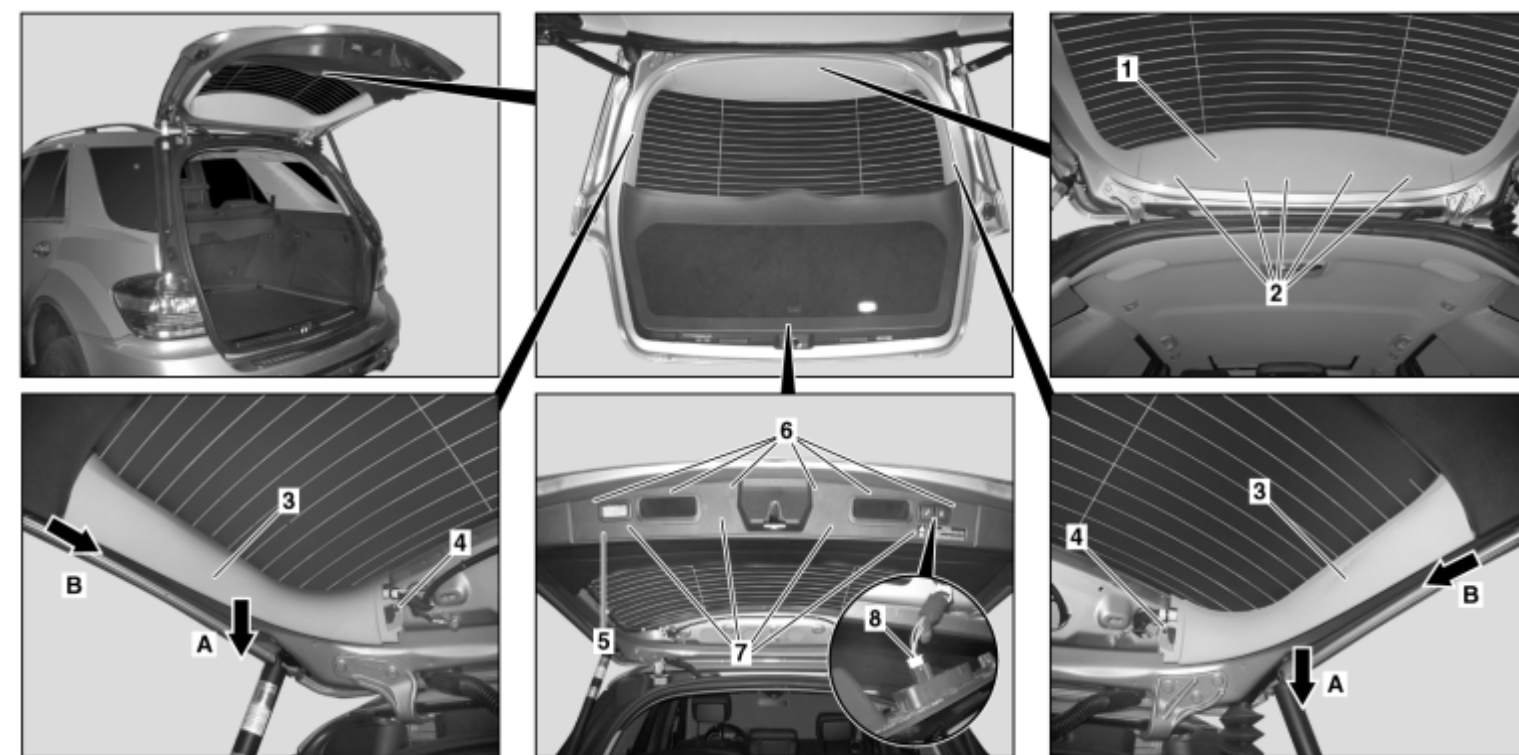


P72.20-2504-09

Shown on model 164.1

1 Upper door lining paneling
2 Mounting clips3 Left door lining paneling
4 Bolts
5 Bottom door lining paneling
6 Mounting clips7 Locking tabs
8 Electrical connector9 Center door lining paneling
11 Electrical connector
12 Mounting clips

E40/1 Rear-end door ambient lamp

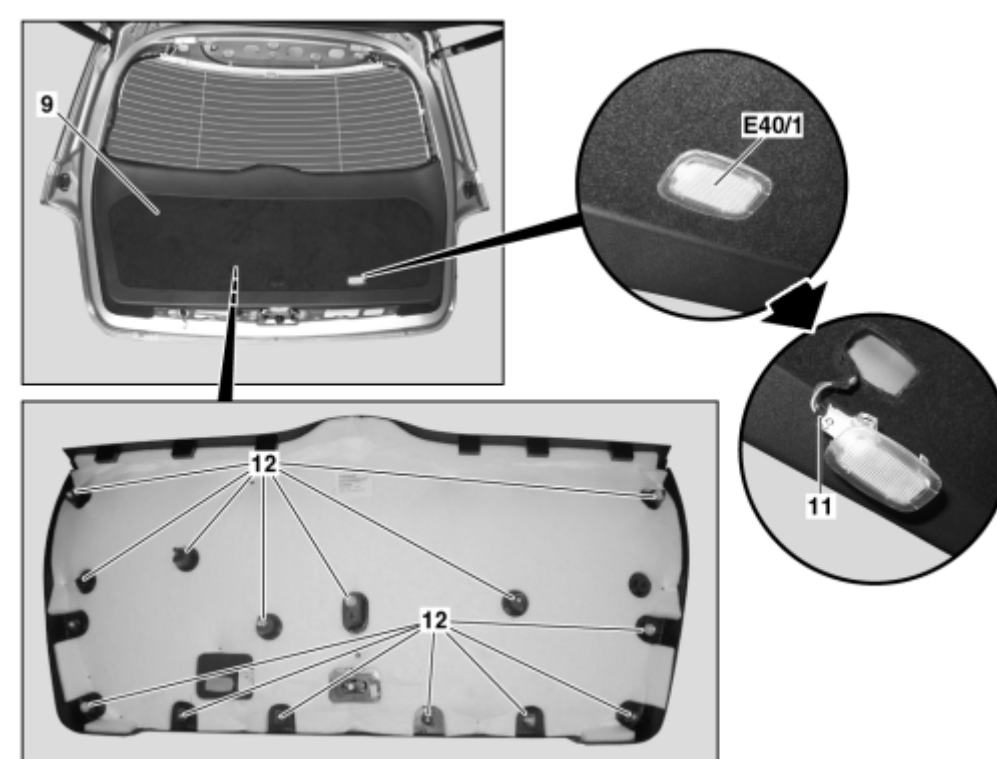

P72.20-2505-06

	Remove/install		
	Danger of breakage or tearing off plastic trim parts and associated mounting clips.		
1	Unclip upper door lining paneling (1) from mounting clips (2) and remove	Mounting wedge	110 589 03 59 00
2	Remove screws (4)		
3	Unclip side door lining paneling (3) and remove	Pull side door lining paneling (3) downward (arrow A) and pull out of rear-end door toward front (arrow B).	
		Mounting wedge	110 589 03 59 00
4	Unclip bottom door lining paneling (5)	Start at right and left side with mounting clips (6), then unclip locking tabs (7).	
		Mounting wedge	110 589 03 59 00
5	Disconnect electrical connector (8) and remove bottom door lining paneling downward (5).		
6	Unclip rear-end door ambient light (E40/1) from center door lining paneling (9), disconnect electrical connector (11) and remove rear-end door ambient light (E40/1)		
7	Unclip center door lining paneling (9)	Start unclipping at right and left side. Directly move mounting wedge to mounting clips (12).	
		Mounting wedge	110 589 03 59 00
8	Remove center door lining paneling (9)	Installation: Replace mounting clips (12).	
9	Install in the reverse order		



110 589 03 59 00

Mounting wedge