


MODEL 164 as of model year 2009 up to 2010

- 1 Clips
- 2 Clips
- 3 Rear trim
- 4 Clips
- 5 Front trim

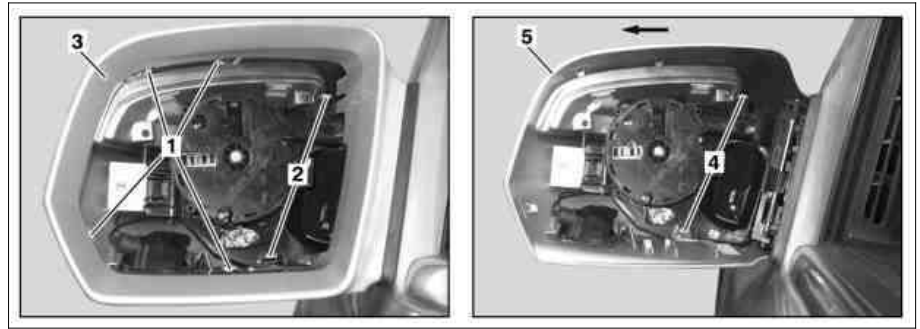

P88.70-2518-04

☒ ☒	Remove/install		
1	Remove mirror glass		AR88.70-P-9020GZ
2	Unclip clips (1) inwards	<b>i</b> Simultaneously pull rear paneling (3) toward front.	
3	Unclip clips (2) toward outside	<b>i</b> Simultaneously pull rear paneling (3) toward front.	
4	Remove rear paneling (3)		
5	Unclip clips (4)		
6	Remove front paneling (5) toward outside (arrow)		
7	Install in the reverse order		