


P68.30-3082-07

Trunk floor removed for better illustration

- 1 Cover
- 2 Stowage compartment
- 3 Anchoring hook
- 4 Paneling
- 5 Load compartment cover bracket
- 6 Anchoring hook cover
- 7 Cover

	Remove/Install		
1.1	Remove cover (1)	<ul style="list-style-type: none"> Only vehicles with stowage compartment Unlock both rotary catches (arrows A) to open and remove cover 	
2.1	Remove storage compartment (2)	<ul style="list-style-type: none"> Only vehicles with stowage compartment Release both rotary catches (arrows B) to loosen and remove stowage compartment. Installation: First position stowage compartment at bottom of stay on paneling (4). 	
3	Release rear seat backrest and fold down		
4	Remove lashing eyes (3)	<ul style="list-style-type: none"> Unscrew one bolt each in center of lashing eye. Installation: Observe positioning pins on lashing eyes 	
5	Unscrew bolt from luggage compartment cover bracket (5)		
6	Remove anchoring hood cover (6)		
7	Pry off cover (7)	<ul style="list-style-type: none"> Mounting wedge 	*110589035900
8	Carefully unclip paneling (4) and remove	<ul style="list-style-type: none"> Mounting wedge 	*110589035900
9	Install in the reverse order		

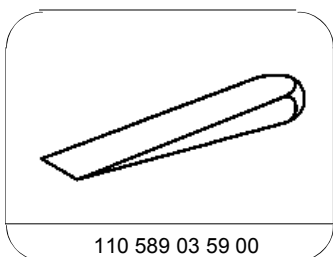

110 589 03 59 00

Mounting wedge