










P72.12-2548-09


Shown on 164.1

- 1 Trim strip
- 2 Cover
- 3 Bolts
- 4 Door lining
- 5 Clips

- 6 Bowden cable
- 7 Electrical connector


- S20/1s3 Left rear power window switch
- S20/1s4 Right rear power window switch

 	Remove/install		
1	Unclip trim strip (1)	 Long wedge	*115589035900
2	Unclip cover (2)	 Long wedge	*115589035900
3	Remove bolts (3)		
4	Unclip door lining (4) from rear door	<ul style="list-style-type: none">  Position mounting wedge immediately next to clips (5) and carefully pry off door lining. Do not damage door lining and paint.  Installation: Replace damaged clips.  Mounting wedge 	*110589035900
5	Remove Bowden cable (6) from door lining.	 Do not kink Bowden cable.	
6	Disconnect electrical connector (7)		
7	Disconnect electrical connector from left rear power window switch (S20/1s3) or right rear power window switch (S20/1s4)	 Do not damage ribbon cable!	
8	Remove door lining.		
9	Install in the reverse order		

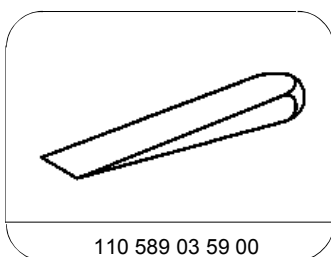

110 589 03 59 00

Mounting wedge

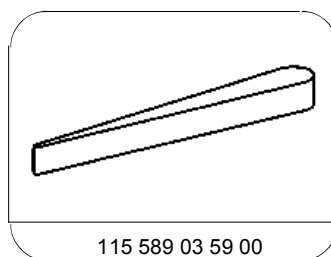

115 589 03 59 00

Long wedge