


AR88.10-P-1400-01GZ	Cut out cutout for shock absorber on fender liner.		
---------------------	--	--	--

Only shock absorbers with protective tube are delivered as replacement part.


If shock absorbers without protective tube are replaced with shock absorbers with protective tube, it is necessary to cut out the fender liner (1) in the area of the protective tube.

Cutting line (a)

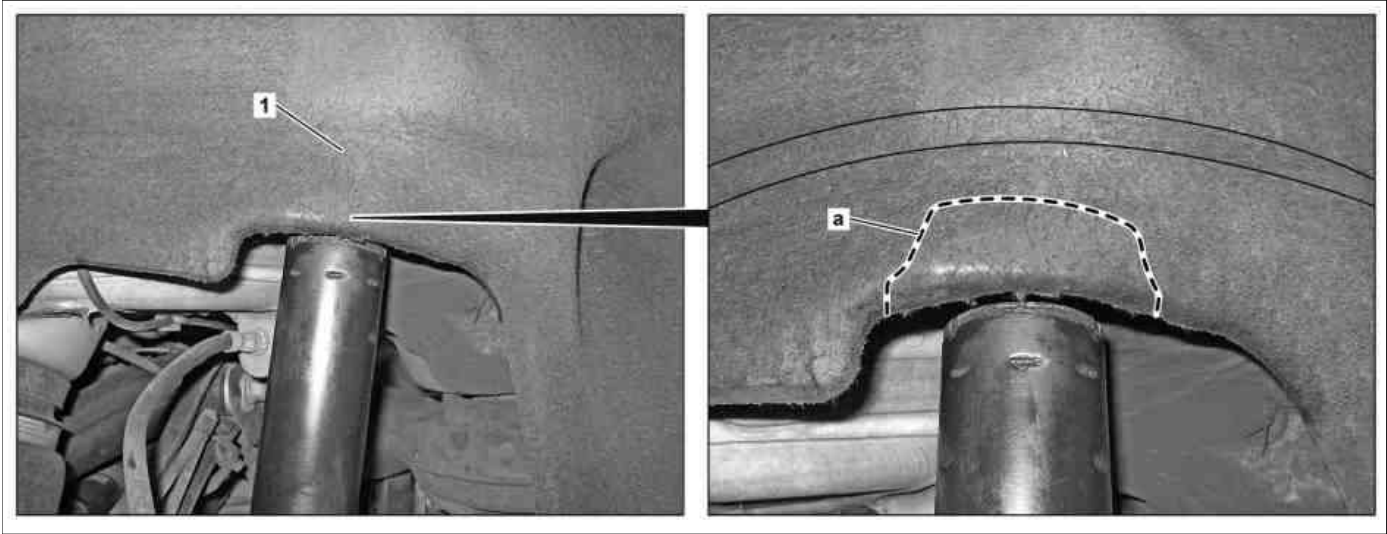


P32.25-2216-08

- A Fender liner, new version
- B Fender line, old version
- C Shock absorber with protective tube
- D Shock absorber without protective tube

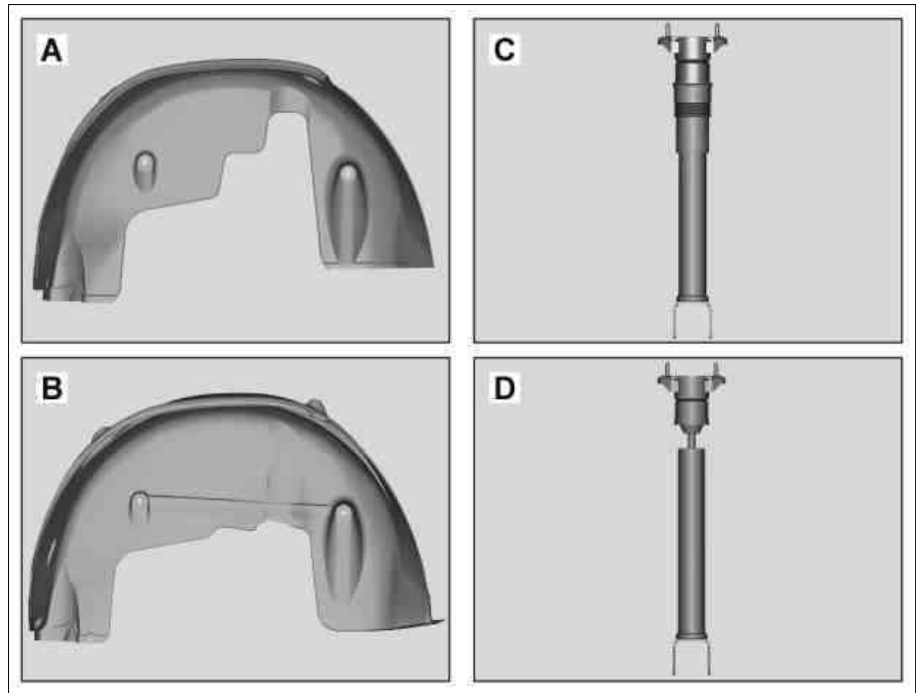

P32.25-2217-06

When installing a shock absorber with protective tube (C) and using an older fender liner version (B), it is necessary to cut out the fender liner along the cutting line (a).

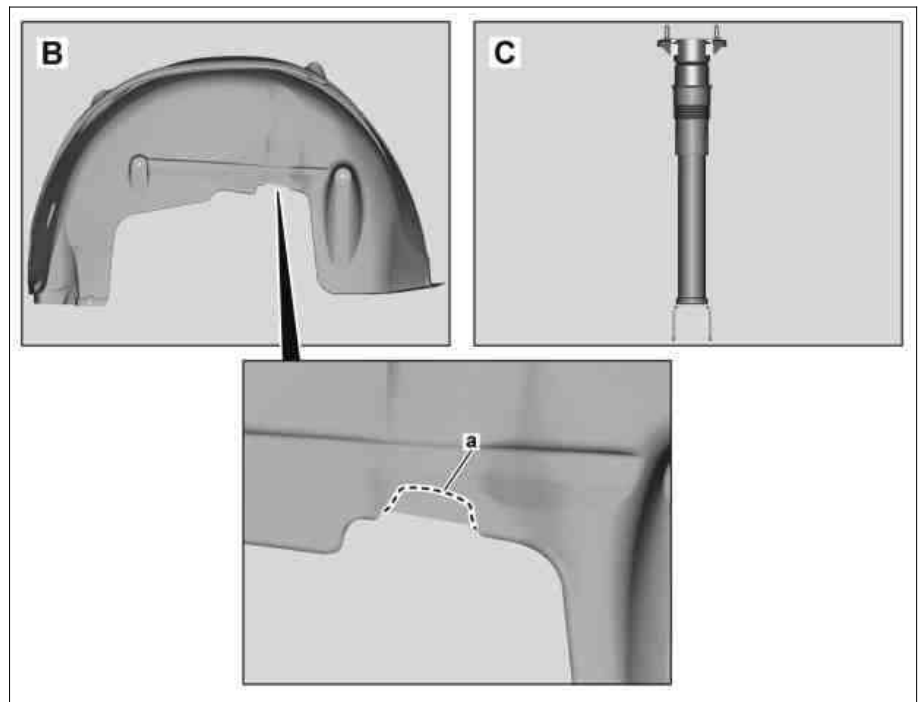

P32.25-2218-06