

P72.10-3045-09

Shown on model 164.1 with automatic rear-end door, code 890


- 1 Trim strip
- 2 Mirror triangle cover
- 3 Electrical connector
- 4 Screws
- 6 Central locking switch
- 7 Electrical connector

- 8 Screw
- 9 Door lining
- 10 Control cable
- 11 Electrical connectors

H4/33 Left front door tweeter

☒ ☒	Remove/install		
1	Switch off ignition and remove the transmitter key from the EIS [EZS] control unit	ⓘ On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
2	Pry trim strip (1) off door lining (9)	☑ Mounting wedge	*110589035900
3	Unclip mirror triangle cover (2)	ⓘ Unclip the mirror triangle cover (2) at the top (arrow). ☑ Mounting wedge	*110589035900
4	Disconnect electrical connector (3) from left front door tweeter (H4/33)		
5	Remove screws (4)		
6	Press both central locking buttons simultaneously; remove central locking switch (6) from door lining (9)	ⓘ Pull the tab visible between the central locking buttons. Do not disconnect the electrical connector (7) from the central locking switch (6).	
7	Remove screw (8)		
8	Pry off door lining (9)	ⓘ Unclip the clips at the bottom and side of the door lining in order to prevent the clip holder from breaking off. Installation: Replace damaged clips. ☑ Mounting wedge	*110589035900

9	Lift door lining (9) upwards and inwards	i In order to provide access to the Bowden cable (10).	
10	Detach Bowden cable (10) from inside of door opener		
11	Separate electrical connectors (11)	! Handle the ribbon cable with care to prevent damage.	
12	Remove door liner (9)		
13	Install in the reverse order		

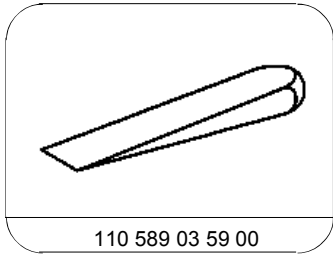

110 589 03 59 00

Mounting wedge