


MODEL 164

Shown on vehicle with automatic rear-end door, code 890

- 1 Door lining
- 2 Clamping plates
- 3 Pins
- 4 Trim strip

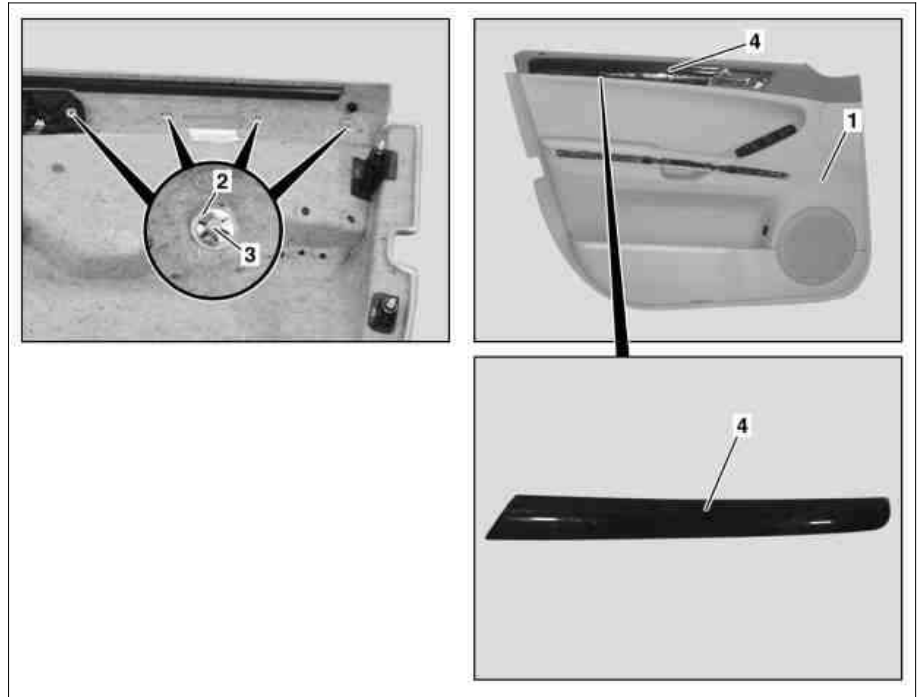

P72.10-3042-06

| | | | |
|---|--|---|------------------|
| | Remove | | |
| 1 | Remove front door lining | Lay door lining front side down on suitable subsurface to prevent damage! | AR72.10-P-1000GZ |
| 2 | Bend open clamping plates (2) with suitable screwdriver and remove from pins (3) | | |
| 3 | Lift door lining (1) and remove trim strip (4) | | |
| | Install | | |
| 4 | Insert trim strip (4) in door lining (1) | Ensure that trim strip (4) is seated correctly on door lining (1). | |
| 5 | Press clamping plates (2) over pins (3) of trim strip (4) | Replace clamping plates (2) Use 11 mm socket with suitable handle Clamping plates (2) should make contact with door lining (1). | |
| 6 | Install door lining in front door | | AR72.10-P-1000GZ |