


MODEL 164

Shown on vehicle with automatic rear-end door, code 890

- 1 Clamping plate
- 2 Bolt
- 3 Clips
- 4 Inside door opener

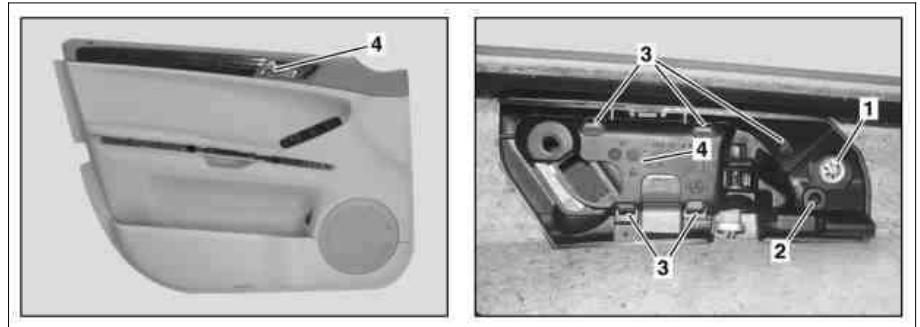

P72.10-3041-04

☒	Remove		
1	Remove front door lining	⚠ Lay door lining front side down on suitable subsurface to prevent damage!	AR72.10-P-1000GZ
2	Bend open clamping plate (1) with suitable screwdriver, remove		
3	Remove screw (2)		
4	Unclip clips (3)		
5	Raise door lining and remove inside door opener (4).		
☒	Install		
6	Insert inside door opener (4) into door lining		
7	Clip in clips (3)		
8	Press clamping plate (1) over pin	<b>i</b> Replace clamping plate (1). Use 11 mm socket with suitable handle for pressing in.	
9	Tighten screw (2)		
10	Install door lining in front door		AR72.10-P-1000GZ