


## MODEL 164

## 1 Rear center console



P68.20-3321-01

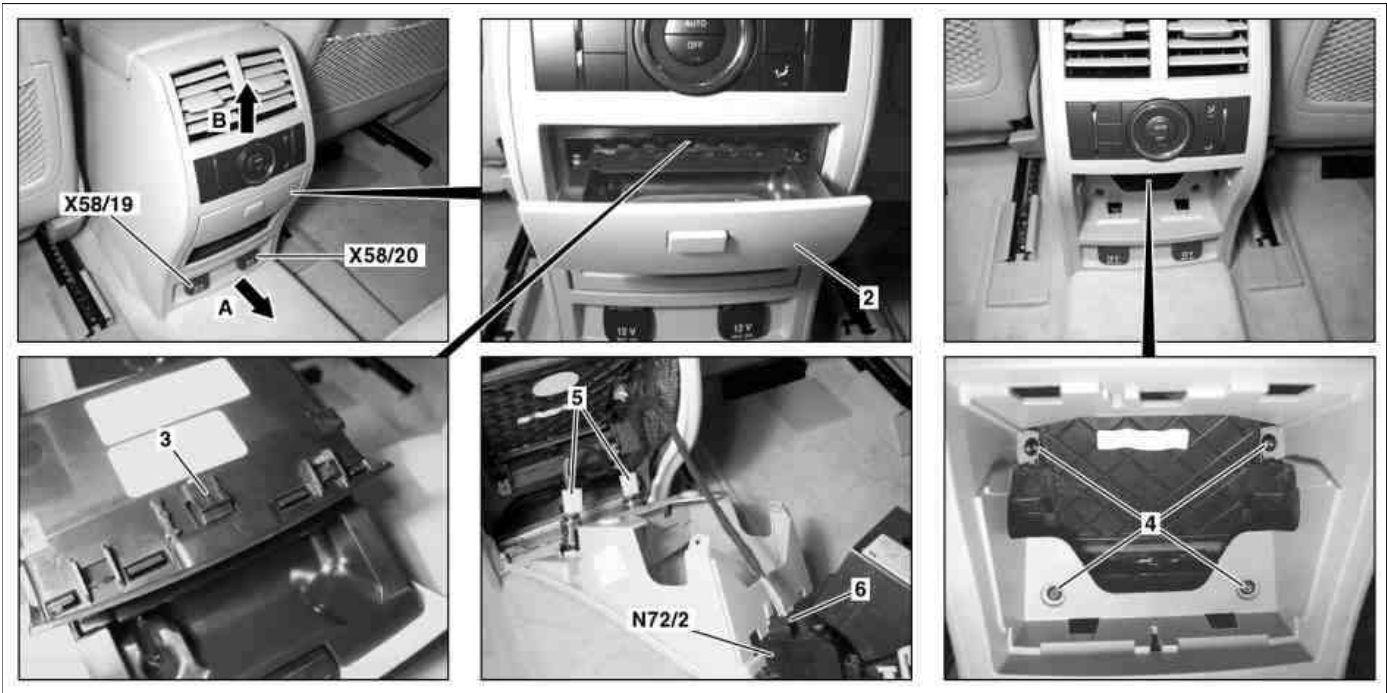

P68.20-3322-09

2 Ashtray

3 Clip

4 Bolts









5 Electrical connectors

6 Electrical connector


N72/2 RCP [HBF] control unit

X58/19 Left 2nd seat row socket

X58/20 Right 2nd seat row socket

 	Remove/install		
1	Completely move driver's seat toward front.		
2	Switch off ignition and remove transmitter key from EIS [EZS] control unit	 On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).	
3	Open ashtray (2)		
4	Unclip clip (3) from ashtray (2).	 <b>Installation:</b> Ashtray (2) should arrest audibly.  Long wedge	<a href="https://www.daimler.com/115589035900">*115589035900</a>
5	Remove ashtray (2).		
6	Remove screws (4)		
7	Unlock armrest cover and set upright		
8	Unclip rear center console (1) upward (arrow B)	 <b>Installation:</b> Pay attention to metal clips.  Pull up lower area (arrow A) of rear center console (1).  Long wedge	<a href="https://www.daimler.com/115589035900">*115589035900</a>
9	Disconnect electrical connectors (2) from left 2nd seat row socket (X58/19) and right 2nd seat row socket (X58/20)		

10	Disconnect electrical connector (6) from RCP control unit (N72/2)		
11	Install in the reverse order		

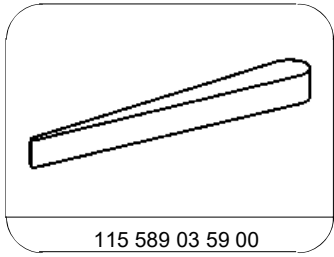

Long wedge