


MODEL 164

MODEL 166

Insert extended T20 Torx Bit through hole to bolt.
Bolt is designed not to come out.

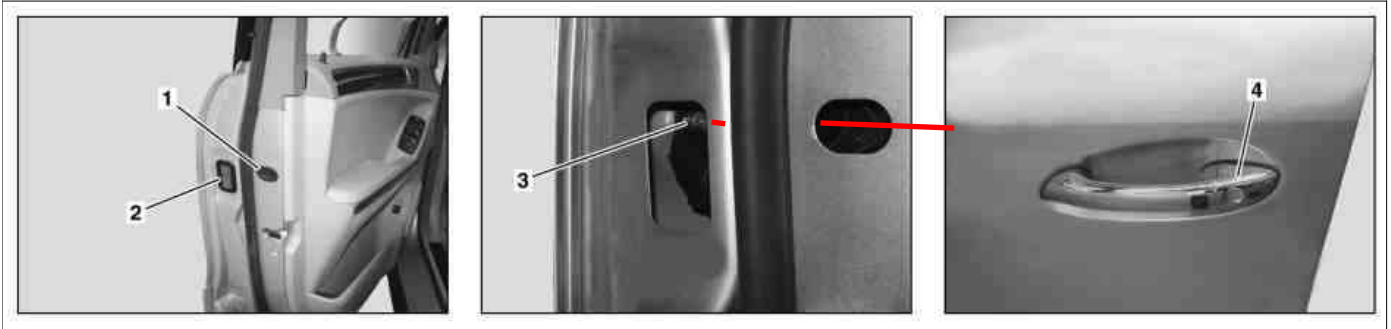


P72.10-3043-07

Shown on model 164.1

1 Rubber grommet
2 Reflector

3 Screw
4 Lock cylinder

	Remove/install		
1	Pry off rubber grommet (1) and reflector (2)	Long wedge	*115589035900
2	Loosen screw/bolt (3) 5 turns T20 Torx extended bit	Installation: Do not strip bolts (3). Otherwise the lock cylinder (4) can be damaged.	
3	Remove lock cylinder (4)	The electrical connector is disconnected when the lock cylinder (4) is pulled out.	
4	Install in the reverse order		

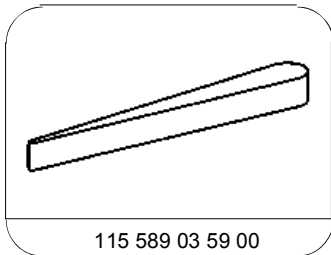

115 589 03 59 00

Long wedge