


MODEL 164.1


- 1 Cover
- 2 Bolts
- 3 Electrical connector

- E5/1 Left front fog lamp
- E5/2 Right fog lamp

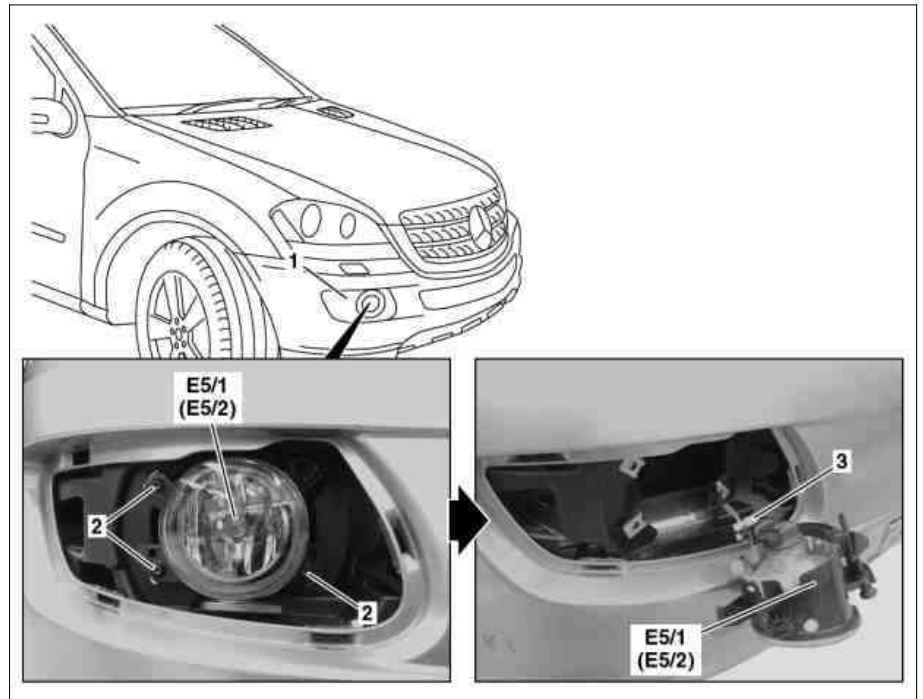

P82.10-3811-06

☒ ☒	Remove/install		
1	Switch off ignition and remove transmitter key from EIS control unit	<b>i</b> On vehicles with keyless go, Code 889: Press keyless go start/stop button repeatedly until the ignition is switched off. Remove transmitter key from vehicle and store outside transmitter range (at least 2 m).	
2	Remove cover (1)	<b>☒</b> Long wedge	<a href="#">*115589035900</a>
3	Unscrew bolts (2)		
4	Take out left front fog lamp (E5/1) or right front fog lamp (E5/2) and disconnect electrical connector (3)		
5	Install in the reverse order		

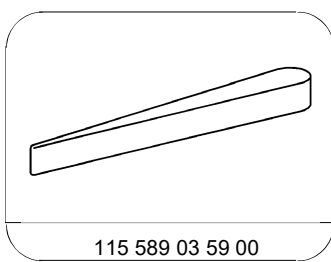

115 589 03 59 00

Longitudinal wedge