


MODEL 164

MODEL 166

except CODE (Z04) Light armoring
except CODE (Z05)


Shown on model 164.1

- 1 Sealing rail
2 Clip

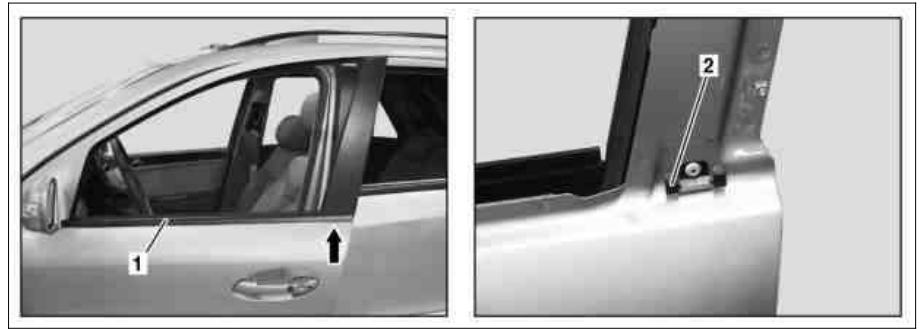

P72.10-3044-04

☒ ☒	Remove/install		
1	Completely lower crank window		
2	Pry off sealing rail (1)	<p>⚠ Model 164: Carefully guide assembly wedge to clip (2, arrow), pry off carefully. Otherwise damage can occur.</p> <p>Installation: Insert sealing rail (1) below outside mirror cover, align and install on window channel.</p> <p>☑ Assembly wedge</p>	*110589035900
3	Check clip (2), replace if required	Model 164	
4	Install in the reverse order	<p>ⓘ Clip (2) is riveted. Remove sealing rail (1) first.</p>	

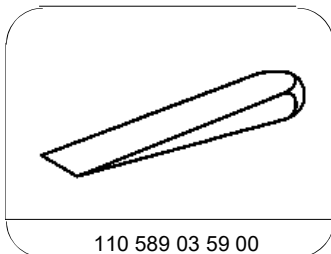

110 589 03 59 00

Mounting wedge