


MODEL 164 (except 164.195)

Shown on model 164.1 with code (942)
EASY-PACK-Fixkit and code (723)
Luggage compartment cover


1 Spare tire well paneling

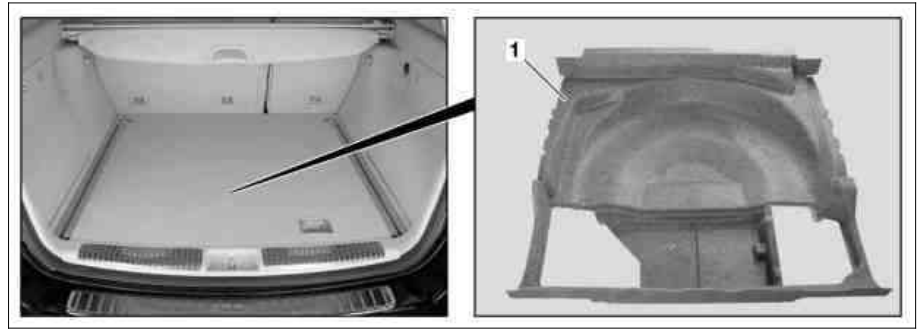

P68.30-3142-04

Shown on model 164.1 with code (942)
EASY-PACK-Fixkit and code (723)
Luggage compartment cover

2 Vehicle tool kit molded part

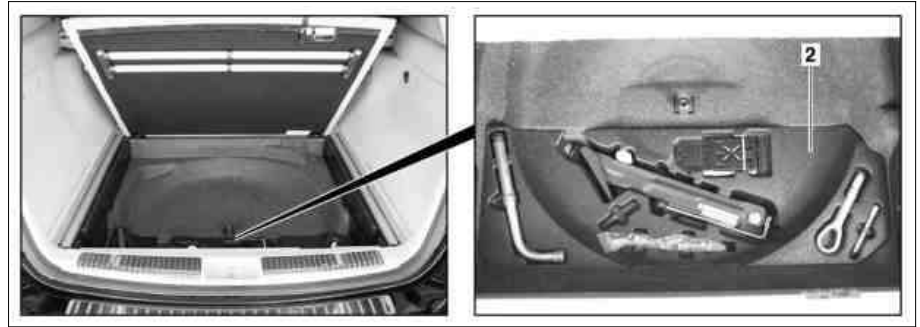









P68.30-3143-04

Shown on model 164.1 with code (942) EASY-PACK-Fixkit and code (723) Luggage
compartment cover

1 Spare tire well paneling



P68.30-3144-01

 	Remove/install		
1	Open liftgate		
2	Open luggage compartment cover	 Only on vehicles with code (723) Luggage compartment cover.	
3	Open load compartment floor and secure		
4	Remove spare tire	 Only on vehicles with code (669) Spare wheel on steel rim.	
5	Remove vehicle tool kit shaped part (2) upward	 Installation: Observe installation position.	
6	Remove rear door sill molding		AR68.30-P-4100GZA
7	Remove clips from outer edges on spare tire recess paneling (1).	 If present.	
8	Pull outer edges of spare tire recess paneling (1) toward inside (arrows)	 Do not kink spare tire recess paneling (1), danger of breakage!  Installation: Ensure that outer edges of spare tire recess paneling (1) are seated correctly.	
9	Install in the reverse order		