


MODEL 164

Shown on vehicle with automatic rear-end door, code 890

- 1 Door lining
- 2 Clamping plates
- 3 Pins
- 4 Trim strip

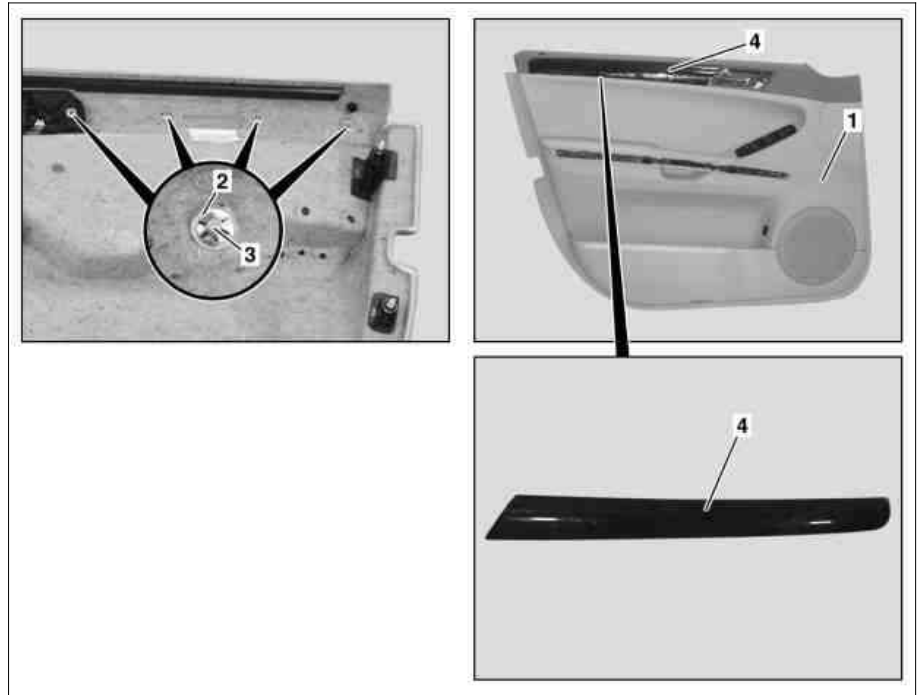

P72.10-3042-06

	Remove		
1	Remove front door lining	Lay door lining front side down on suitable subsurface to prevent damage!	AR72.10-P-1000GZ
2	Bend open clamping plates (2) with suitable screwdriver and remove from pins (3)		
3	Lift door lining (1) and remove trim strip (4)		
	Install		
4	Insert trim strip (4) in door lining (1)	Ensure that trim strip (4) is seated correctly on door lining (1).	
5	Press clamping plates (2) over pins (3) of trim strip (4)	Replace clamping plates (2) Use 11 mm socket with suitable handle Clamping plates (2) should make contact with door lining (1).	
6	Install door lining in front door		AR72.10-P-1000GZ