


MODEL 164.1/8
with CODE 460 (Canada version)
with CODE 550 (Trailer coupling)

MODEL 164.1/8
with CODE 494 (US version)
with CODE 550 (Trailer coupling)

MODEL 164.1/8
with CODE 496 (Mexico version)
with CODE 550 (Trailer coupling)

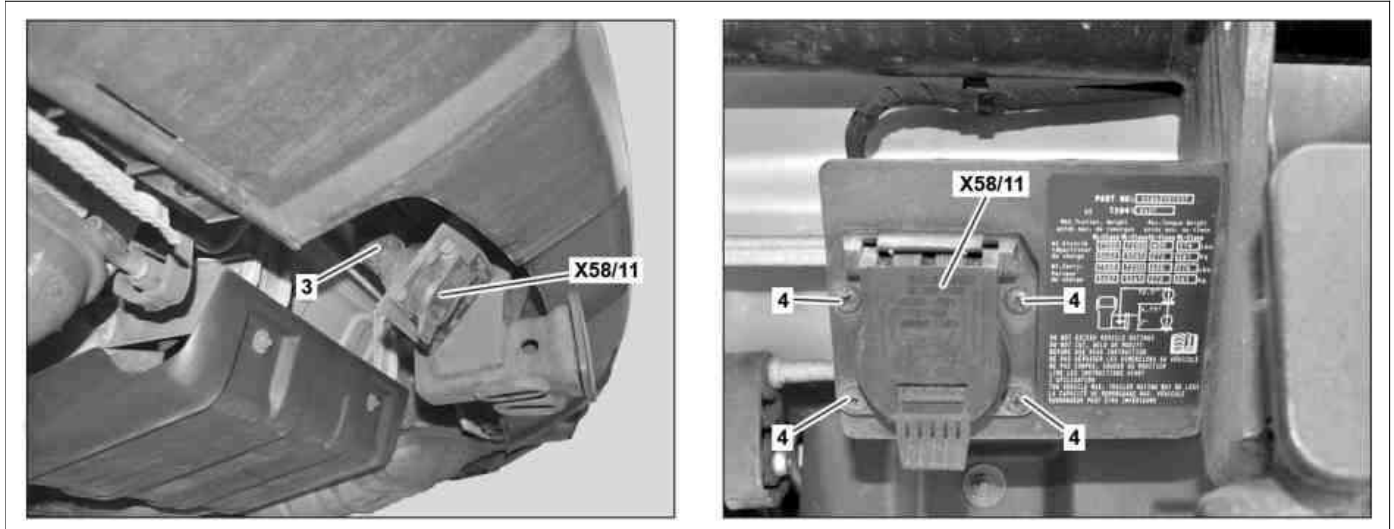



P31.19-2709-08

3 Electrical connector

4 Screw

X58/11 Trailer hitch socket (7-pin)

	Remove/install		
1	Remove screws/bolts (4)		
2	Detach electrical connection (3) from trailer hitch socket, 7-pin (X58/11)		
3	Remove trailer hitch socket, 7-pin (X58/11)		
4	Install in the reverse order		
	Check		
5	Perform function test of light signals at trailer hitch socket		
			AN31.10-P-0008-01A