

P72.20-2504-09


Shown on model 164.1

- 1 Upper door lining paneling
- 2 Mounting clips
- 9 Center door lining paneling
- 11 Electrical connector
- 12 Mounting clips

- 3 Left door lining paneling
- 4 Bolts
- 5 Bottom door lining paneling
- 6 Mounting clips

- 7 Locking tabs
- 8 Electrical connector


E40/1 Rear-end door ambient lamp

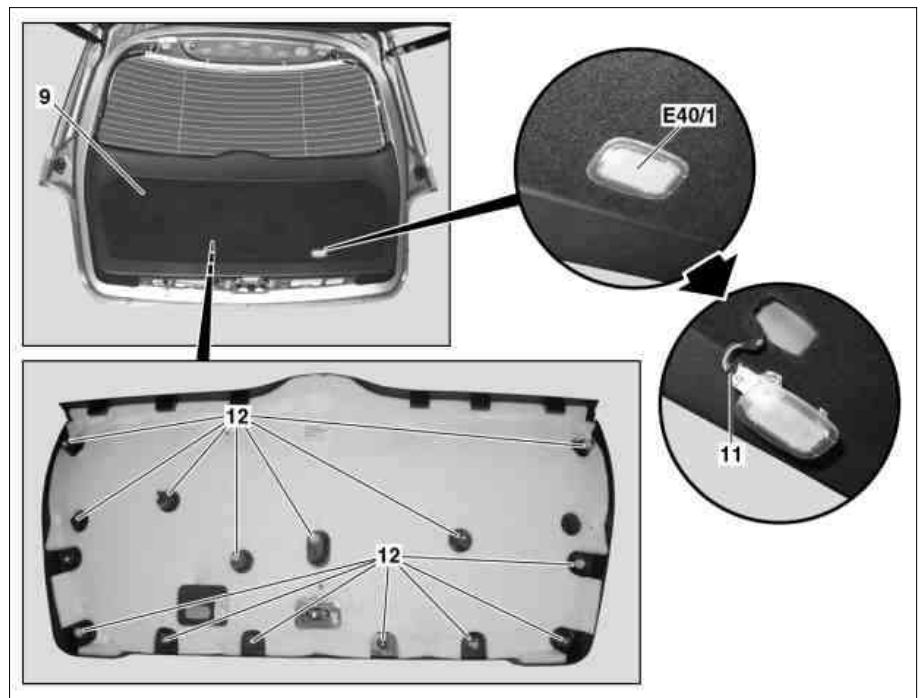

P72.20-2505-06

☒ ☒	Remove/install		
⚠ Removal	Danger of breakage or tearing off plastic trim parts and associated mounting clips.		
1	Unclip upper door lining paneling (1) from mounting clips (2) and remove	☑ Mounting wedge	*110589035900
2	Remove screws (4)		
3	Unclip side door lining paneling (3) and remove	ⓘ Pull side door lining paneling (3) downward (arrow A) and pull out of rear-end door toward front (arrow B). ☑ Mounting wedge	*110589035900

4	Unclip bottom door lining paneling (5)	<p>i Start at right and left side with mounting clips (6), then unclip locking tabs (7).</p> <p>S Mounting wedge</p>	*110589035900
5	Disconnect electrical connector (8) and remove bottom door lining paneling downward (5).		
6	Unclip rear-end door ambient light (E40/1) from center door lining paneling (9), disconnect electrical connector (11) and remove rear-end door ambient light (E40/1)		
7	Unclip center door lining paneling (9)	<p>i Start unclipping at right and left side. Directly move mounting wedge to mounting clips (12).</p> <p>S Mounting wedge</p>	*110589035900
8	Remove center door lining paneling (9)	i Installation: Replace mounting clips (12).	
9	Install in the reverse order		

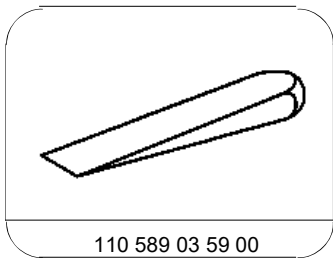

110 589 03 59 00

Mounting wedge