



MODEL 164

- 1 Rubber grommets
- 2 Door module
- 3 Plastic bolts
- 4 Door lock

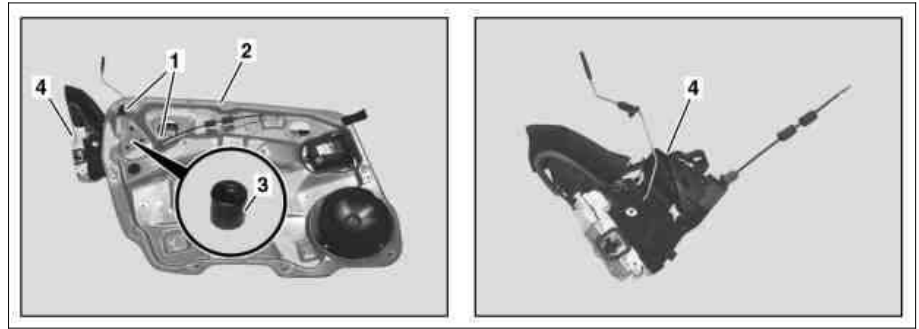

P72.10-3040-04

☒	Remove		
1	Remove door module (2)		AR72.10-P-0900GZ
2	Press rubber grommets (1) out of door module (2)		
3	Punch plastic bolts (3) out in direction of door inside with suitable punch	⚠ Support door module (2) to prevent from bending	
4	Remove door lock (4) from door module (2)	🔧 Mounting wedge	*110589035900
☒	Install		
5	Position door lock (4) on door module (2) and clip in	⚠ When clipping in door lock (4), hold door module (2) to prevent door module (2) from bending. <b>i</b> With aid of helper. Door lock (4) should catch audibly on clamping sleeves in door module (2)	
6	Press plastic bolts (3) into clamping sleeves in direction of door inside with suitable punch.	⚠ When pressing in plastic bolts (3), a helper should press against the door lock (4) with a hammer handle or similar object to prevent door module (2) from bending.	
7	Press rubber grommets (1) into door module (2)		
8	Install door module (2)		AR72.10-P-0900GZ
9	Perform a function test		

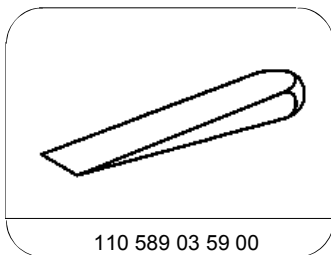

110 589 03 59 00

Mounting wedge