


Model 166.0/8
up to model year 2016

1 Cut out bumper (1) along embossed cutting line (2).

ⓘ Place bumper (1) on a clean soft base while working.
Otherwise the paintwork of the bumper (1) can be damaged.

2 Deburr edge of cut on bumper (1).

Shown on model 166.024

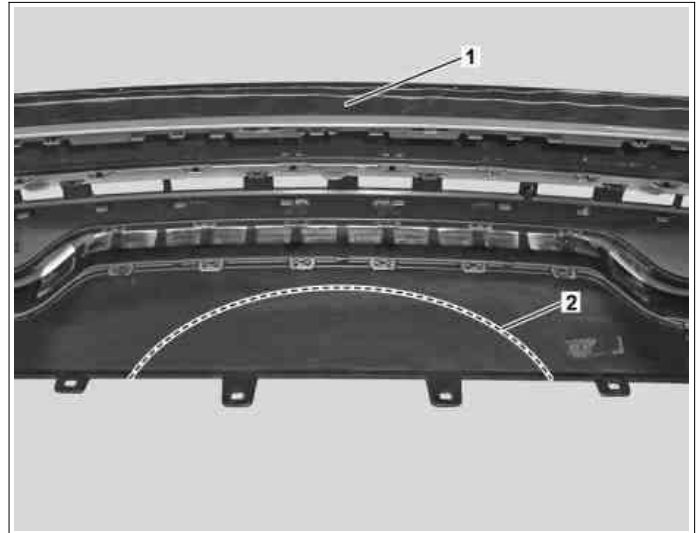

P31.11-2336-11