


MODEL 166


- 1 Glove compartment
- 2 Side paneling
- 3 Hose
- 4 AC housing

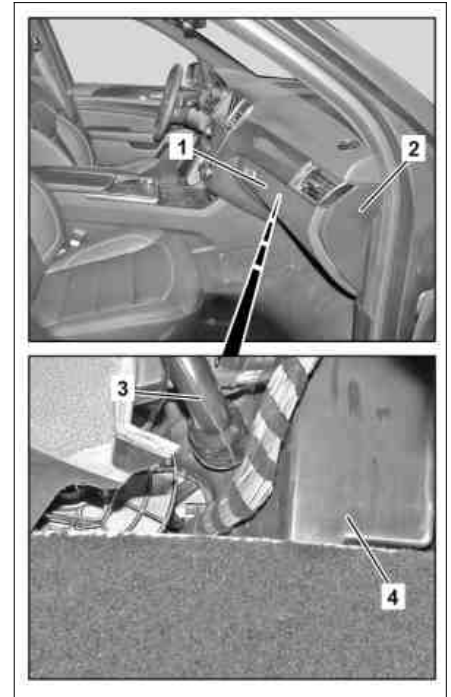

P68.10-4429-03


Shown on vehicle without code (819) CD changer

- 1 Glove compartment
- 5 Bolts
- 6 Screw
- 7 Bolts

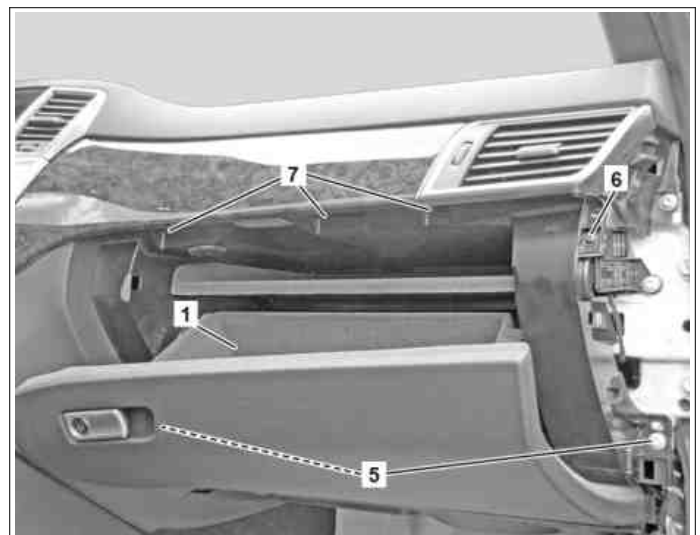

P68.10-4428-11

| ☒ ☒ | Remove/install | | |
|-----|---|--|------------------|
| 1 | Remove right cover below instrument panel | | AR68.10-P-1520GQ |
| 2 | Remove hose (3) from AC housing (4) | i Installation: Pay attention to correct routing of the hose (3). | |
| 3 | Remove side paneling (2) from instrument panel | ☒ | *115589035900 |
| 4 | Remove bolts (5) | | |
| 5 | Open glove compartment (1) | | |
| 6 | Move CD changer to lock position | Vehicles with code (819) CD changer | |
| 7 | Unscrew bolt (6) at side | | |
| 8 | Unscrew bolt (7) in glove box (1) | | |
| 9 | Lower glove box (1) | | |
| 10 | Disconnect electrical connectors from glove box (1) | | |
| 11 | Remove glove box (1) | | |
| 12 | Install in the reverse order | | |
| 13 | Check CD changer for proper function | Vehicles with code (819) CD changer | |

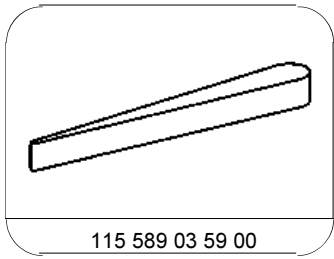

115 589 03 59 00

Long wedge