



MODEL 166

- 1 Covers
- 2 Lower door lining
- 3 Bolts
- 4 Clips
- 5 Center door lining
- 6 Clips
- 7 Lugs
- 8 Right upper door lining
- 9 Clips
- 10 Left upper door lining
- 11 Clips

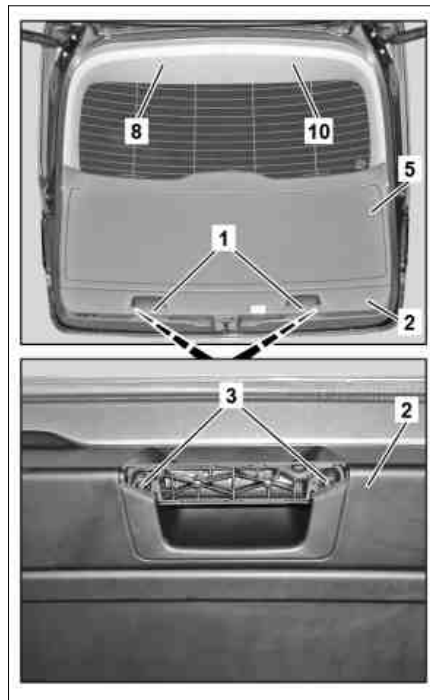


P72.20-3095-03

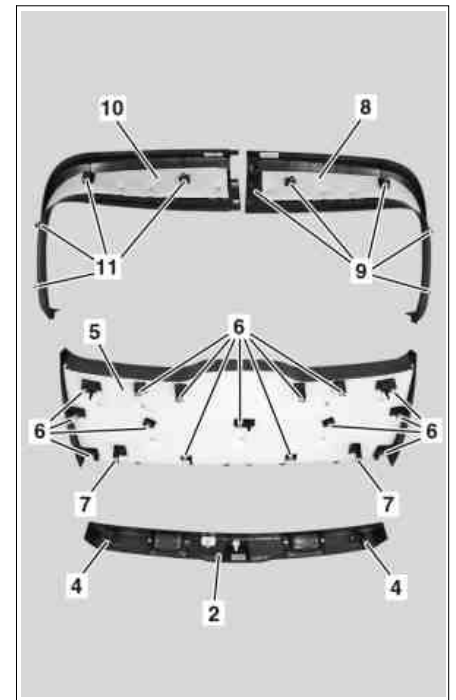

P72.20-3096-03

☒ ☒	Remove/install		
1	Unclip cover (1) from front side of lower door lining (2)	ⓘ Slightly tap against assembly wedge to loosen covers; do not unclip covers (1) by twisting assembly wedge. Place rag over assembly wedge to protect lower door lining (2). Otherwise covers (1) and lower door lining (2) can be damaged. ☑ Mounting wedge	*110589035900
2	Remove screws/bolts (3)		
3	Unclip lower door liner (2) from clips (4)	☑ Mounting wedge	*110589035900
4	Disconnect electrical connectors	ⓘ Number of electrical connectors can vary according to vehicle equipment.	
5	Unclip center door liner (5) from clips (6)	ⓘ Start edge of center door lining (5). ☑ Mounting wedge	*110589035900
6	Unhook center door lining (5) from shackles (7)	ⓘ <b>Installation:</b> Hook center door lining (5) first into both shackles (7).	
7	Unclip right upper door lining (8) from clips (9)	☑ Mounting wedge	*110589035900
8	Unclip upper left door lining (10) from clips (11)	☑ Mounting wedge	*110589035900
9	Install in the reverse order		

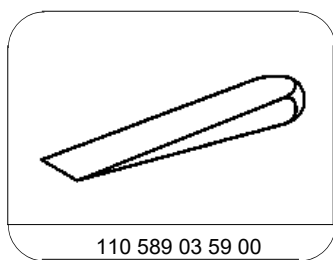

110 589 03 59 00

Mounting wedge