



1 Rear center console

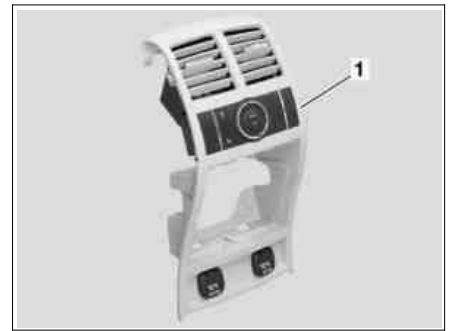

P68.20-3321-01

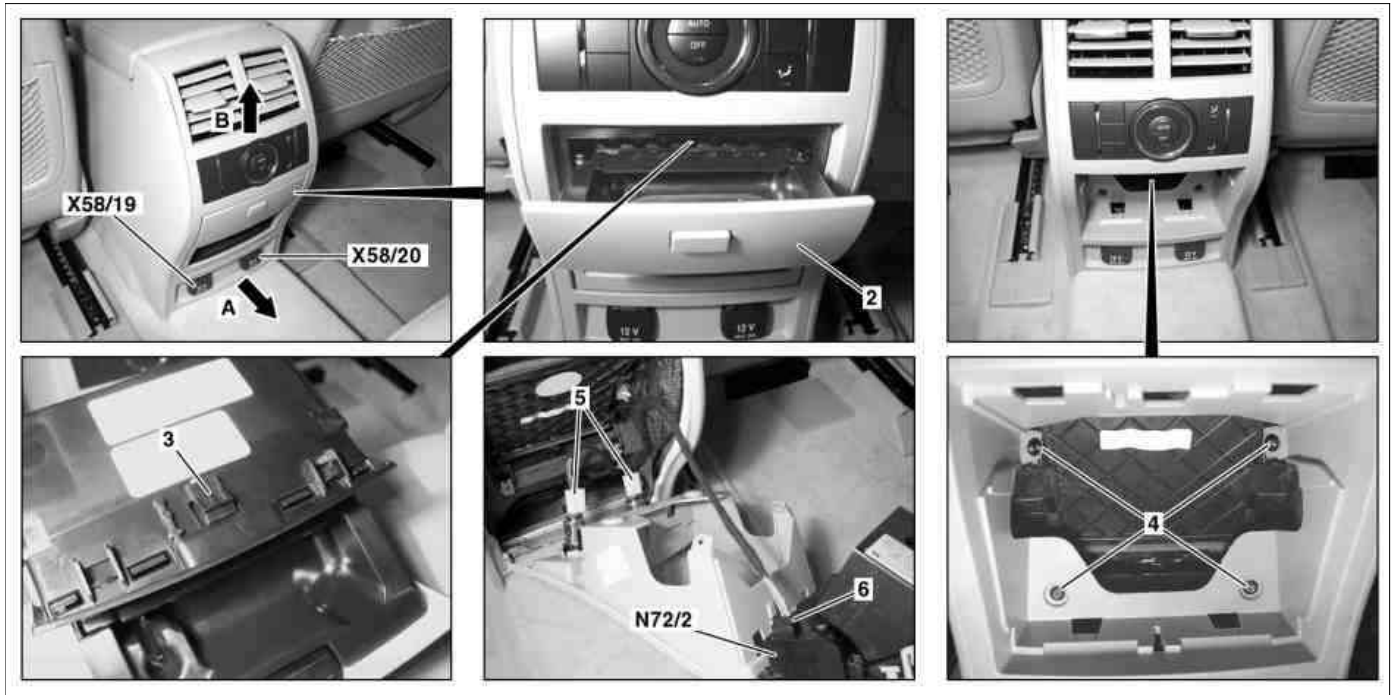

P68.20-3322-09


- 2 Ashtray
- 3 Clip
- 4 Bolts

- 5 Electrical connectors
- 6 Electrical connector

- N72/2 RCP [HBF] control unit
- X58/19 Left 2nd seat row socket
- X58/20 Right 2nd seat row socket

☒ ☒	Remove/install		
1	Completely move driver's seat toward front.		
2	Switch off ignition and remove transmitter key from EIS [EZS] control unit	<p>i On vehicles with Keyless Go, code 889: Press Keyless Go start/stop button repeatedly until ignition is switched off. Remove transmitter key from vehicle and store it in a location beyond its transmission range (at least 2 m).</p>	
3	Open ashtray (2)		
4	Unclip clip (3) from ashtray (2).	<p>i Installation: Ashtray (2) should arrest audibly.</p> <p><input checked="" type="checkbox"/> Long wedge</p>	*115589035900
5	Remove ashtray (2).		
6	Remove screws (4)		
7	Unlock armrest cover and set upright		
8	Unclip rear center console (1) upward (arrow B)	<p>i Installation: Pay attention to metal clips.</p> <p>i Pull up lower area (arrow A) of rear center console (1).</p> <p><input checked="" type="checkbox"/> Long wedge</p>	*115589035900
9	Disconnect electrical connectors (2) from left 2nd seat row socket (X58/19) and right 2nd seat row socket (X58/20)		

10	Disconnect electrical connector (6) from RCP control unit (N72/2)		
11	Install in the reverse order		

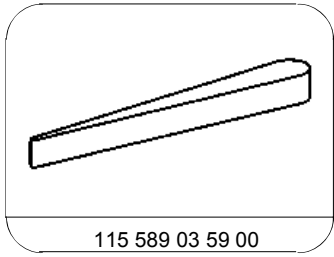

Long wedge