



MODEL 164

- 1 Armrest cover bracket
- 2 Rubber grommet
- 3 Cable

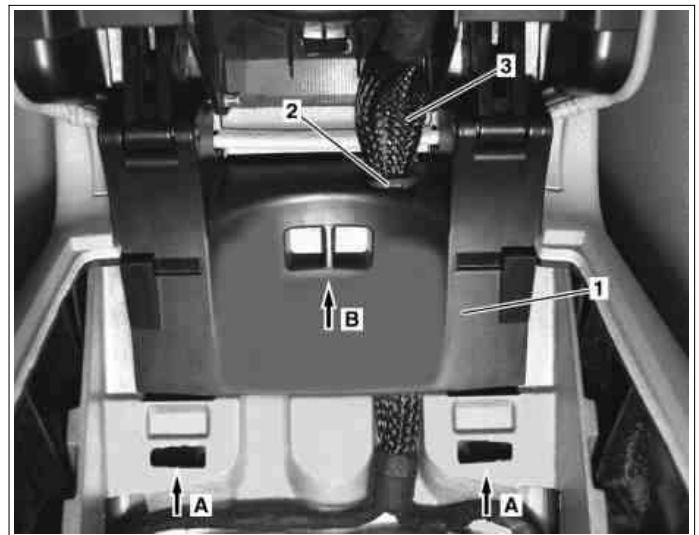

P68.20-3343-11

☒ ☒	Remove/install		
1	Remove rear center console	i Do not disconnect electrically	AR68.20-P-2020GZ
2	Remove stowage tray for portable CTCL		AR82.70-P-8921GZ
3	Remove stowage box		AR68.20-P-2320GZ
4	Unclip armrest cover bracket (1) through openings (arrows A)	i Installation: Armrest cover bracket (1) should arrest audibly. ☑ Long wedge	*115589035900
5	Pull out armrest cover bracket (1) upward (arrow B)	i Unclip one side, pull upward and hold. Unclip other side, pull upward. Pull armrest cover (1) out by pulling alternately upward (arrows B). i Installation: Ensure rubber grommet (2) is seated correctly.	
6	Guide cable (3) through armrest cover bracket (1)		
7	Install in the reverse order		

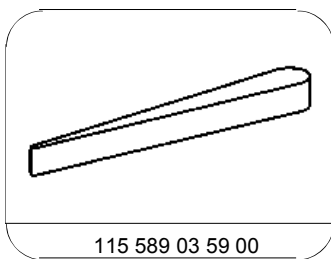

115 589 03 59 00

Long wedge