




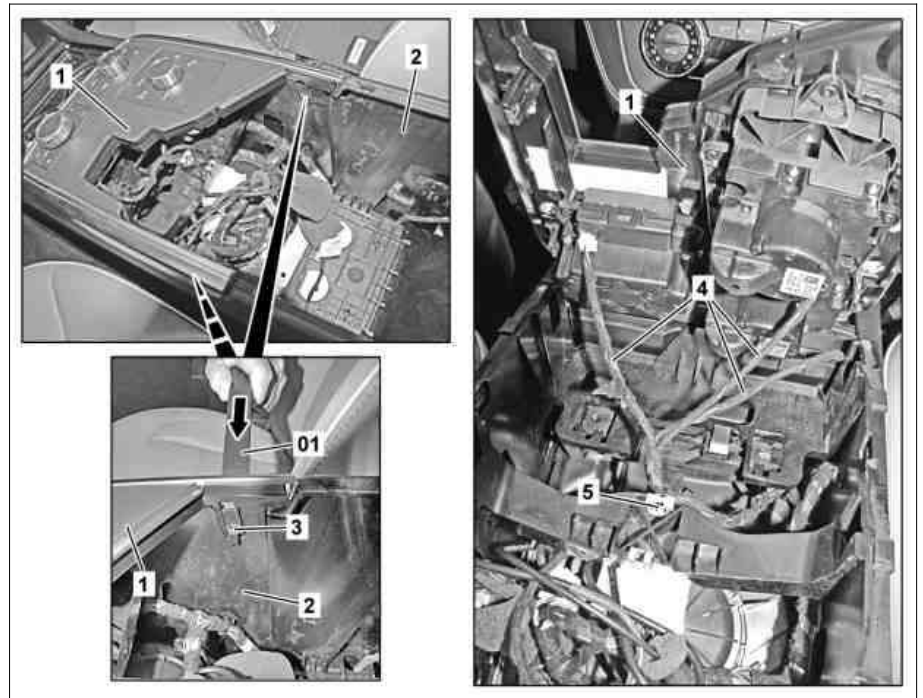

Model 166
up to model year 2016


Shown MODEL 166 with CODE 430 (Head restraints in rear) and with CODE 489 (AIRMATIC)

- 01 Long wedge
- 1 Cover
- 2 Center console
- 3 Clip
- 4 Electrical line
- 5 Retaining clip



P68.20-4463-06

 	Remove/install		
1	Switch on ignition and store transmitter key outside of transmission range (min. 2 m)		
2	Remove stowage box		AR68.20-P-2320GQ
3	Position long wedge (01) between cover (1) and center console (2) on clips (3)	 Long wedge	*115589035900
4	Press in long wedge (01) (arrow) and unclip clip (3) from center console (2)	 Long wedge	*115589035900
5	Unclip cover (1) from center console (2) at rear		
6	Lift cover (1) at rear and unclip retaining clips (5)		
7	Disconnect electrical connectors on electrical lines (4) from cover (1)		
8	Unclip cover (1) at front from center console (2) and remove		
9	Install in the reverse order		

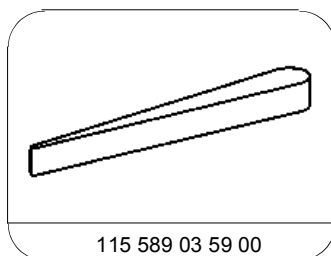

115 589 03 59 00

Long wedge