


Model 166, 292

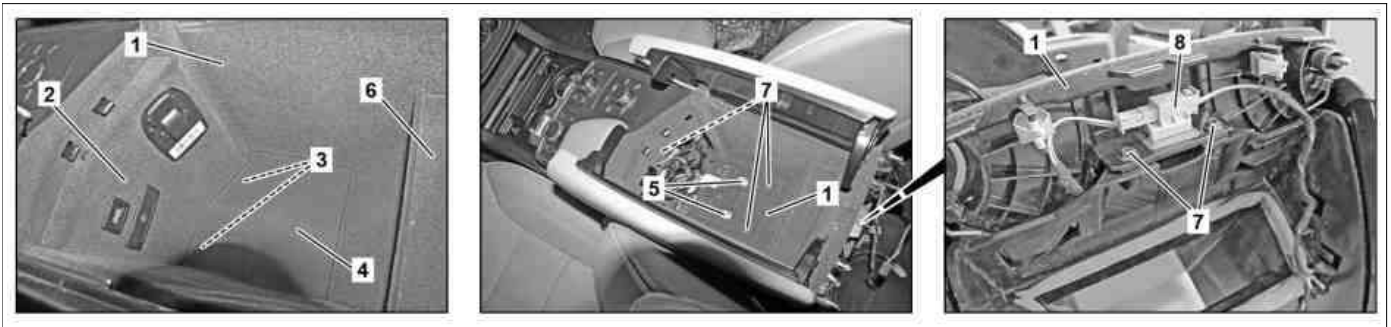

P68.20-4462-07

Shown on MODEL 166 with CODE 386 (Comfort telephony)

1 Stowage box
2 Cover
3 Bolts

4 Mat
5 Bolts
7 Bolts

8 Electrical connector

i	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
↔ ↔	Remove/install		
1	Remove rear center console		AR68.20-P-2020GQ
2	Unlock armrests in stowage box (1) and position upright		
3	Remove mat (4) from stowage box (1)		
4	Remove bolts (3)		
5	Lift cover (2) and disconnect electrical lines from cover (2)		
6	Remove cover (2)		
7	Remove screws (5)		
8	Disconnect electrical connector (8) from stowage box (1) and unclip		
9	Remove bolts (7)	i Installation: First position all bolts (7) and then tighten.	
10	Remove stowage box (1) upward with armrests		
11	Install in the reverse order		